
# Pro-Tech TOOLS

## car ridge stands 2pcs

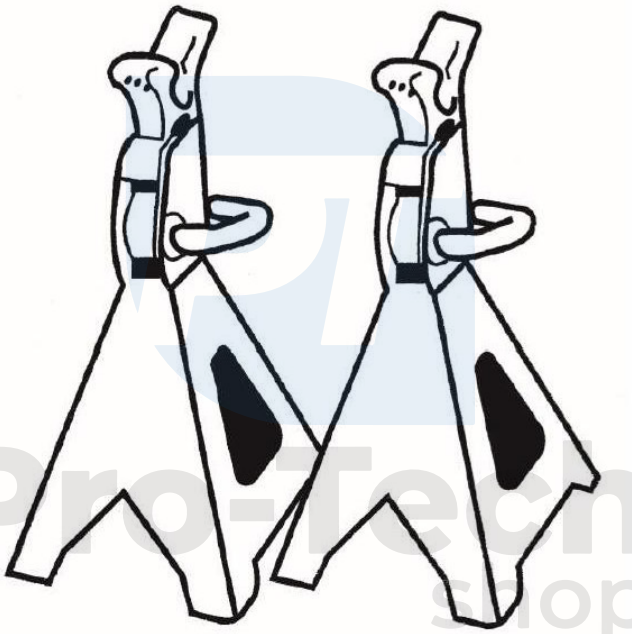

## Instructions for use

**Translation of the original instructions**



**Please read these instructions thoroughly before first use. It is the user's responsibility to familiarise themselves with all the instructions necessary for safe use and operation and to understand all the risks that may arise during the operation of the equipment.**

**WARNING!!!**

Due to the continuous improvement of products, the photographs and images included in the instructions are for illustrative purposes only and may from the purchased goods.

These differences cannot be grounds for a complaint.

**DESCRIPTION**

The support is designed for work where heavy loads need to be supported. It is forbidden to move supported loads. The product has been designed for domestic use only and cannot be used professionally, i.e. in companies and businesses. Proper, reliable and safe operation of the equipment depends correct use, therefore: please read the entire manual and keep before working with the equipment.

**SAFETY RULES**

A strut is a mechanical device that operates under high loads.

- Follow basic safety rules when working.

- Read and keep operating manual before starting work.

- Never exceed the maximum load on the supports.

- When supporting vehicles, lock or wedge under the wheels and apply the handbrake.

- Do not leave lifted loads unattended.

- It is forbidden to have children and untrained equipment operators near the workplace or equipment storage area.

- Do not wear loose clothing or jewelry. Long hair should be pinned up.

- Wear personal protective equipment.

- The support must be placed on a level, flat, hard and stable base.

- The support should be placed under the object to be lifted so that the load is supported in the middle of the saddle.

- Keep the equipment away from sources of heat and fire, as this could damage the equipment impair its operation.

- Before lifting any load, make sure that the support is not displaced after the load has been lifted.

- Before placing any load, make sure that the support is not damaged in any way. If the support requires repair, contact an authorised service centre.

- Be foresighted, do not work if you are tired or under the influence of medication.

## TECHNICAL DATA

| Model | JS02B | JS02G | JS03B | JS03C | JS03G | JS06B | JS06C | JS06G | JS12B |
|---|---|---|---|---|---|---|---|---|---|
| Load capacity (kg) | 2000 | 2000 | 3000 | 3000 | 3000 | 6000 | 6000 | 6000 | 12000 |
| Minimum height (mm) | 260 | 280 | 290 | 280 | 295 | 370 | 395 | 420 | 495 |
| Maximum height (mm) | 400 | 380 | 430 | 415 | 415 | 610 | 605 | 580 | 770 |

Package includes 1 pair= 2 pcs supports

## BEFORE USE

1. Check that the pack of supports is complete or that no parts are missing.

2. Check the supports before each use. It is forbidden to use the supports if they are bent or broken.

3. Read the entire instruction manual carefully and familiarize yourself with the dangers associated with improper use of the supports.

## SERVICE

NEVER use supports to support the front and rear of the vehicle, or only one side of the vehicle. The supports are designed to be used in pairs and their load capacity also applies to the pair. To support the vehicle, use one pair support. Do not exceed the load capacity of the supports.

1. The height is adjusted by means of a post.

2. The handle of the lock should secure the post in the desired position. Push the lock handle to secure the post. Make sure the latch is properly secured before loading.

3. Carefully position the supports so that the load is in the centre of the saddle.

4. Lower the vehicle slowly onto the supports.

5. Make sure the vehicle has been secured before starting work. Secure the wheels against turning with chocks.

## LOWERING THE LOAD

Make sure there are no objects or persons under the vehicle when lowering the load.

1. Lift the vehicle using a suitable hoist.

2. Carefully release the lock and allow the support post to lower fully.

3. Carefully remove the supports, then slowly lower the vehicle.

## MAINTENANCE

Check each support regularly. Make sure that each part moves freely. Do not lubricate any part of the support with oil or grease. If rust appears, clean the area by sandblasting or paint with a suitable paint. Make sure you use suitable spare parts.

## STORAGE

Store the supports upright in a clean and dry place.