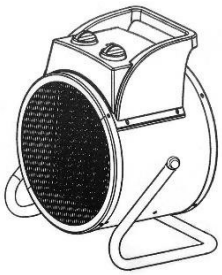
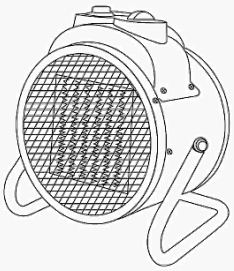
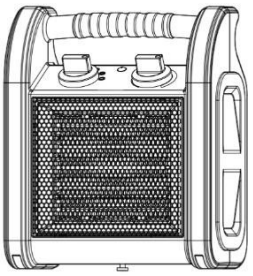
Electric heater

		
BH-20R1,BH-30R1	**BH-50R2**	**BH-20R3,BH-30R3**

Instructions for use

Pro-Tech shop

Dear User,

Thank you for choosing our product. Please read the important safety and usage information carefully before putting the equipment into operation. Any damage caused by improper use of the equipment or in violation of safety rules voids the distributor's warranty and liability.

Safety and use rules:

The electric heater is designed for heating enclosed living spaces where it is necessary to maintain the temperature at a certain level.

1. The device is intended for household use only. It should not be used in commercial or industrial settings. The device is not intended for outdoor use. Do not use in rooms where there is a risk of explosion or fire. The heater is not waterproof. The appliance must not be used in the bathroom or in the immediate vicinity of baths, showers, water hoses, etc.

2. Before using the device for the first time, make sure that all protections that were used to wrap the device (foil, etc.) are removed from the device. For your own safety and that of your children, do not leave any objects (plastic bags, polystyrene, etc.) on the device. Before use check that the device is not damaged externally. Pay particular attention to the power cord. If any part is damaged, the device must not be used. If the power cord is damaged, it must be replaced by an authorized company or person. Incompetent repairs may result in the equipment being dangerous to the user.

3. Only use the device in an upright/vertical position.

4. To prevent overheating or fire, do not cover the device. Do not switch on the appliance if explosive or flammable vapours are nearby. Do not place the heater near an open flame or near cooking or heating equipment. Do not expose the appliance to sunlight, hot surfaces, moisture, sharp edges, etc.

5. Do not use the appliance near curtains, drapes and other fabrics (the material may catch fire).

6. The heater should be placed on a stable, hard, preferably refractory surface at a safe distance from furniture or other equipment.

7. The device can only be operated with the power cord with plug already installed. The plug must be plugged into the appropriate socket in accordance with the information on the type plate. Do not use an extension cord.

8. Do not touch the appliance or the plug with wet or damp hands. This can cause a life-threatening electric shock.

9. Make sure the mains voltage is the same as that on the device.

10. The socket to which the power cord of the device is connected must always be accessible so that the device can be disconnected from the mains at any time.

11. The appliance must not be left plugged into the mains unattended due to the possibility of fire.

12. Always disconnect the device from the mains when it is not in use. To disconnect the device from the mains, pull the plug from the socket. Do not pull the cord under any circumstances.

13. If the heater is to be moved to another location, turn off the appliance and then unplug the plug from the socket. Allow the appliance to cool before moving it. Do not move the appliance by pulling on the connection cable. Use the handle when carrying the device.

14. The surface of the heater is hot. - After switching off, the device stays warm for a while - it gradually cools down.
When the heater is in operation, do not touch the hot air outlet elements - there is a risk of burns.

15. It is forbidden to stay directly in front of the hot air outlet while the heater is in operation - there is a risk of burns.

16. Do not disassemble the equipment when it is live - risk to life.

17. Do not touch the device with wet hands - risk to life. Only touch the heater with dry hands.

18. Do not insert any foreign objects into the openings of the device. Risk of injury or electric shock and damage to the equipment.

19. When operating the heater, it is forbidden to smoke cigarettes, approach with burning or smoldering objects and use any equipment (tools, accessories, etc.) that can cause a spark - risk of life threatening.

20. This device is not intended for use by people (including children) with reduced physical, sensory or mental abilities, by persons without experience or knowledge of the equipment, unless under supervision or in accordance with instructions for use of the equipment provided by persons responsible for their safety. The device is intended for use by adults only and should be kept out of the reach of children.


Technical specification:

Model	**BH-20R1**	**BH-30R1**	**BH-20R3**	**BH-30R3**	**BH-50R2**
Supply voltage	230V	230V	230V	230V	400V
Frequency	50Hz	50Hz	50Hz	50Hz	50Hz
Electric heater operating mode:	25/1000W/2000W	30/1500/3000W	25/1000W/2000W	30/1500/3000W	50/2500/5000W

Pro-Tech shop

Instructions for use:

The device is controlled by rotary dials on the top of the heater.

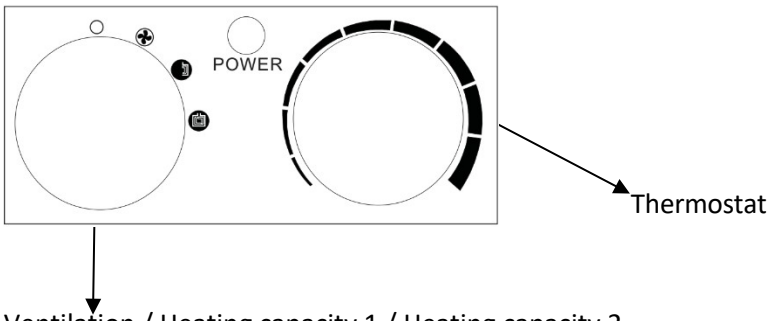

Operating mode:

With the rotary dial you can set the operating mode: ventilation / heating power 1 / heating power 2

Thermostat:

You can set the desired room temperature using the temperature dial. For this

purpose:

1. Set the mode switch to one of the "heating" positions.
2. Turn the temperature control clockwise until it clicks into place.
3. When the room is heated to the desired temperature, turn the temperature control counterclockwise until it clicks.
4. The thermostat will control the heater so that the temperature in the room is at the same level.
5. When you have finished working, switch the mode switch to the "ventilation" position to allow the unit to cool down.

Cleaning:

1. We recommend cleaning the heater of dust and other dirt once a month. This will ensure efficient operation of the equipment.
2. Always disconnect the equipment and allow it to cool completely before performing any maintenance
3. Use a vacuum cleaner to remove dust.
4. Clean the outside of the appliance with a damp cloth and then dry it with a dry cloth. Never immerse the device in water. Do not use any aggressive cleaning agents or solvents as they can damage the surface of the heater.

Storage:

1. Before storing the device, disconnect it from the power supply, let it cool down and clean it.

2. If the device will not be used for a long time, place it with the operating instructions in the original cardboard box and store it in a dry and well-ventilated place.

3. Do not place any heavy objects on the box during storage as this could damage the equipment.

Warranty:

1. This equipment is warranted in accordance with applicable laws. The basis for consideration of the warranty is the retained proof of purchase.

2. Damage caused by natural wear and tear of parts, damage during transport, use contrary to the intended purpose in accordance with the operating instructions, including failure to comply with the installation conditions of the equipment, is not covered by the warranty.

3. A claim will only be considered if the equipment is delivered in its original condition and in its original packaging.

4. It is forbidden to make technical changes to the equipment.



The symbol on the product or on its packaging means that this product must not be treated as household waste. Take it to the appropriate collection point for recyclable materials for scrapped electrical and electronic equipment. Proper disposal of discarded products has an impact on the environment and health. More for information on the recyclability of this product, please contact your local municipality, municipal sanitation service or the shop where you bought the product.

Pro-Tech shop