
Pro-Tech HOME

Massage chair

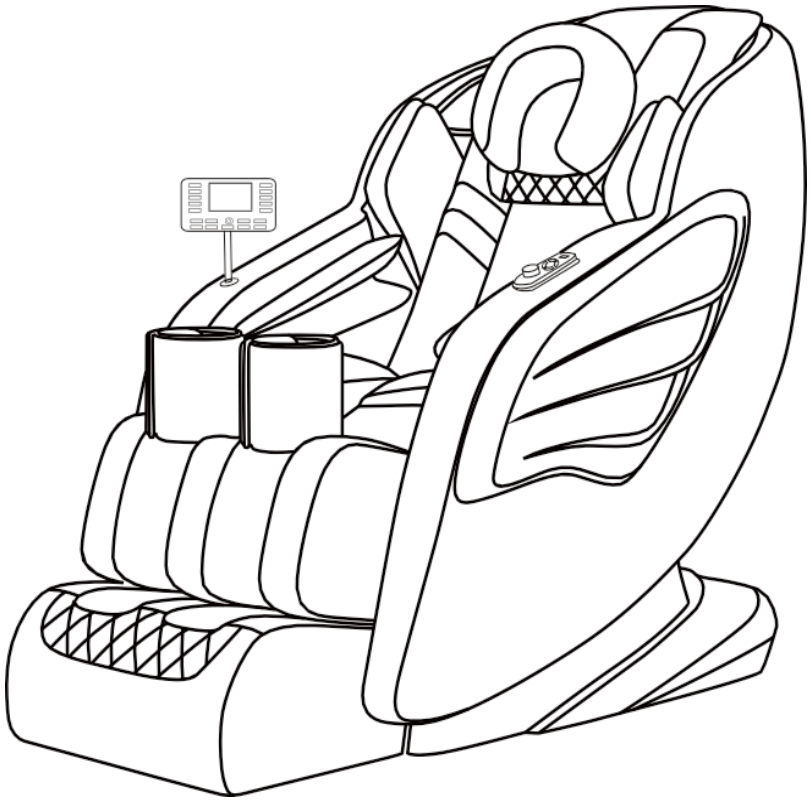

Instructions for use

Translation of the original instructions


Preparation and instructions before use


1. Open the packaging and remove the accessories


1. Remove the packing tape from the outer box of the massage chair, lift the outer box upwards and pull it out.
2. Remove the accessories and set them aside for later use.

2. Positioning the massage chair

* Remove the entire massage chair from the box and place it in a suitable location in your home.
* Avoid placing the chair in direct sunlight or near heating appliances, as this may cause the upholstery to discolour or harden.
* To prevent damage to the floor and reduce noise, place a cloth or other material under the massage chair.
* Ensure there are no obstacles in front of or behind the massage chair (leave a space of more than 30 cm behind the chair's backrest).
* Do not place it in damp or uneven areas.
* To avoid signal interference, place the massage chair at least 1 metre away from televisions, radios and other devices.

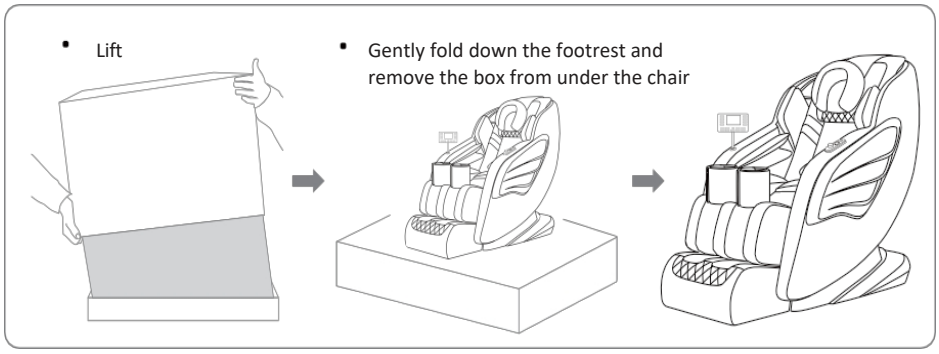


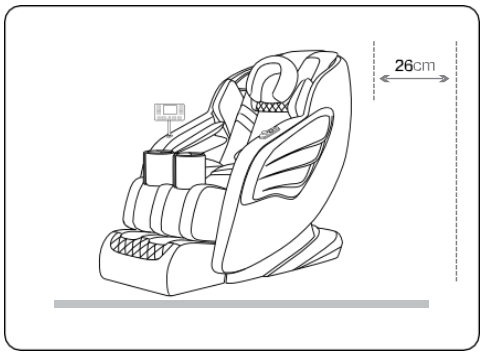

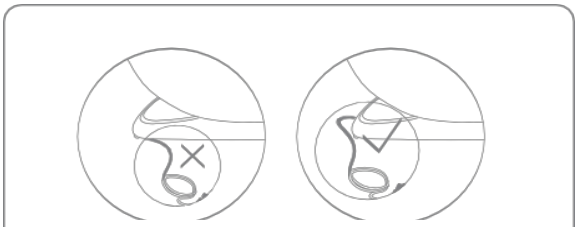


Note: Do not trap the power cable under the base of the massage chair and, when moving the chair, avoid running over the power cable.

Product design

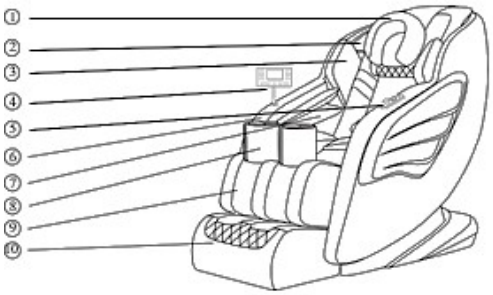





1. Cushion
2. Speaker cover
3. Side cushions
4. Remote control
5. Keyboard shortcut
6. Armrest
7. Shoulder cushion
8. Knee cushion
9. Footrest
10. Foot roller
11. Safety catch
12. Power connector
13. On/Off

How to move the massage chair




1. Grasp the backrest with both hands as shown in the picture on the left, and tilt the chair backwards by approximately 30°.

2. Carefully move the massage chair forwards or backwards using the castors until it reaches the desired position, then release it.

*Do not move the massage chair whilst someone is using it.
*Moving the massage chair may damage the floor. It is recommended that you place a mat under the chair.
*To avoid falling, hold the massage chair firmly when moving it.
*When moving the massage chair, ensure that the footrest is fully retracted to prevent injury.

Instructions for the remote control

Control panel functions: (front of the control panel)

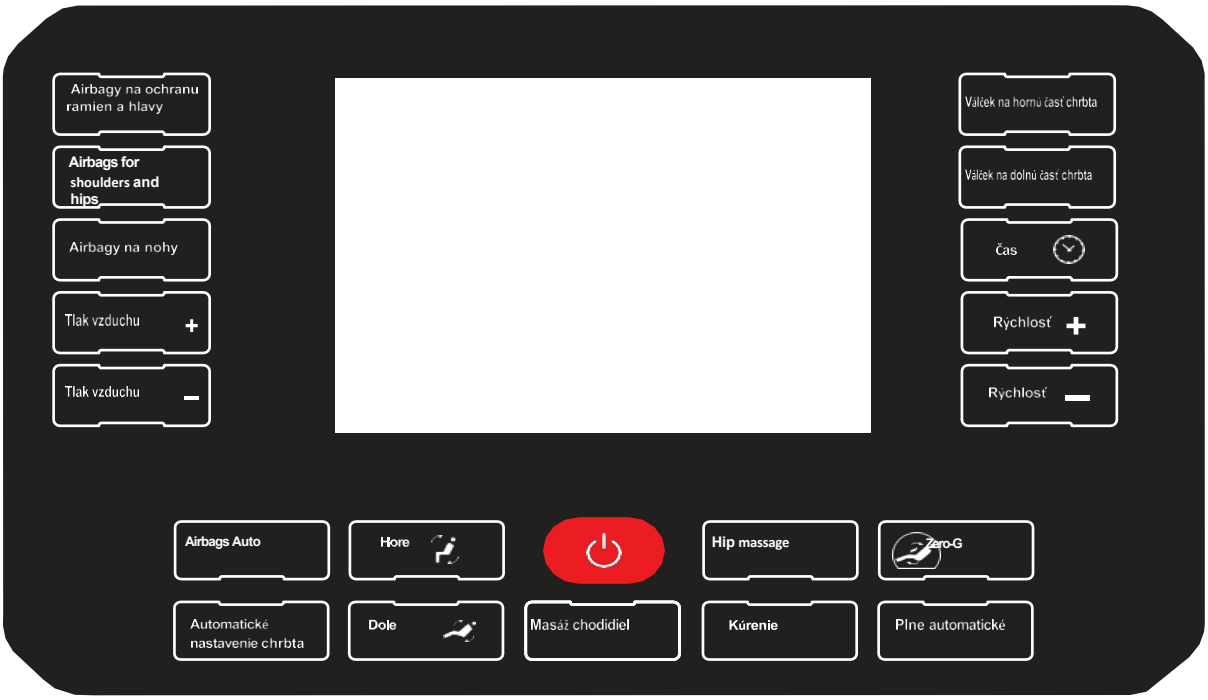

User manual

Description of functions on the underside

1. Power: In standby mode, press the button to illuminate the controller display. At this point, you can select the appropriate massage programme and start the massage.

2. Air cushions for shoulders/head: Turn the air cushion massage function for the shoulders and head on or off.

3. Air cushions for arms/hips: Turns the massage function of the air cushions for the arms and hips on or off.

4. Foot air cushion: Turns the foot cushion massage function on/off.

5. Air pressure +: Press the button to increase the air pressure in the cushion; there are 3 levels in total.

6. Air pressure -: Press the button to decrease the air pressure in the cushion; 3 levels in total.

7. Auto air cushions: Turns the massage function for all air cushions on or off.

8. Automatic back mode: Turns the automatic back mode on/off (simultaneously turns the massage modes on/off).

9. Up: Press and hold this button to raise the backrest and lower the calf rest; release the button to stop the backrest and calf rest.

10. Down: Press and hold this button to lower the backrest and raise the calf rest; release the button to stop the backrest and calf rest.

11. Foot massage: Turns the foot rollers on/off; 3 settings are available.

12. Hip massage: Turns the hip massage on/off.

13. Heating: Turns the back and foot heating on or off.

14. Zero-G: With a single click, you can activate the zero-gravity function at its maximum angle. The Zero-G function means that the entire chair moves into a horizontal position.

15. Fully automatic mode: Relax / Joyful / Stretching / Powerful / Sleep /

16. Upper Back Roller: Press once to start a clockwise massage, with A1 appearing on the display. Once the massage has started, press twice for a counter-clockwise rotation, with A2 appearing on the display. Once the massage has started, press three times to alternate between clockwise and anti-clockwise rotation, with A3 appearing on the display. Once the massage has started, press the button four times to display A0, which will switch off all roller massage functions in the shoulder and upper back area.


17. Lower back roller: Press once to start a clockwise massage; B1 will appear on the display. Once the massage has started, press twice to switch to a counter-clockwise rotation; B2 will appear on the display. Once the massage has started, press three times to alternate between clockwise and anti-clockwise rotation, and B3 will appear on the display. Once the massage has started, press four times to display B0, which will switch off all lower back roller massage functions.

18. Time: Press the start button to set: 5 minutes, 10 minutes, 15 minutes, 20 minutes, 25 minutes, 30 minutes, or to turn off the cycle.

19. Speed +: Press this button to increase the speed of the rollers; there are 3 levels in total.

20. Speed -: Press this button to decrease the speed of the rollers; there are 3 levels available in total.

Keyboard Shortcuts Guide

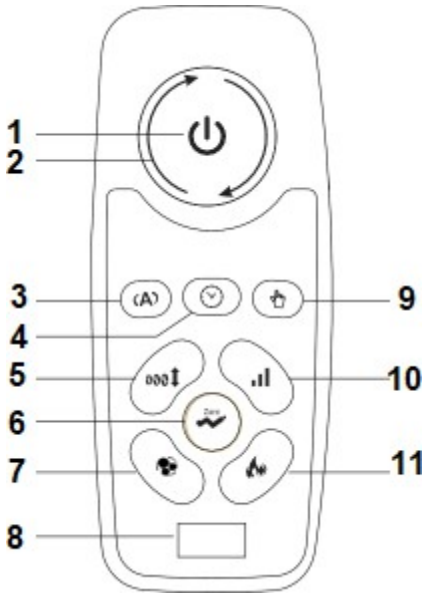

1. On/Off
2. Lift control
3. Automatic mode
4. Time
5. Airbag force
6. Zero gravity
7. Feet/Roller with cushion
8. USB
9. Manual mode
10. Massage intensity
11. Heat

Instructions for using Bluetooth

1. Bluetooth is enabled by default when the device is switched on, with the name: VDGROUP.
2. Turn on Bluetooth on your phone, search for and connect to the relevant Bluetooth device to play music.


Before use

·When adjusting the foot massage section upwards, do not sit in the massage chair, as this could damage the mechanism and cause the chair to tip over, which could result in accidents and injuries.

·Before sitting down in the massage chair, ensure that the backrest is in an upright position. Adjust the recline angle to suit your personal preferences only after you have sat down.

·To prevent accidents and injuries, do not place your hands or any objects in the gaps between the seat and the backrest, or between the seat and the foot massage section.

·When adjusting the angle, ensure there are no obstacles or small animals behind the backrest or under and in front of the foot massage section.

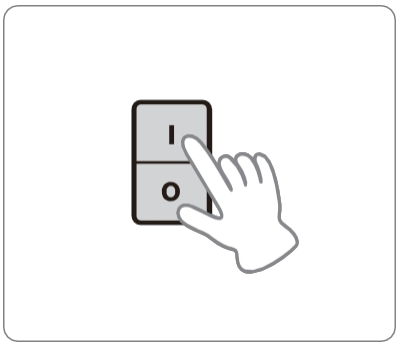

Connect the massage chair's power cable
-Connect the power cable
-Turn on the main switch, which is located on the right-hand side of the massage chair.
-If you are not using the massage chair for a long period of time, remember to switch the power switch to the 'O' position to extend its lifespan.
-Unplug the power cable.
-Do not bend or twist the power cable to avoid damaging it.

The switch is located on the rear cover of the electronic control unit.

Safety precautions


Please read all instructions carefully before use.

This massage chair must be used with a socket that matches the type of plug. Incorrect earthing may cause electric shock. Do not modify the plug or socket yourself; always have it checked by a qualified technician. When using electrical products, observe basic safety precautions to avoid risks such as electric shock, burns, fire, or injury, including the following.

- Only use with a socket that matches the plug.
- Ensure that the plug is fully inserted into the socket to reduce the risk of a short circuit.
- Always unplug the chair immediately after use or before cleaning.
- Do not use this product in high temperatures.
- Do not store or use this product outdoors or in direct sunlight.
- In the event of a sudden power cut whilst using the device, switch it off immediately and unplug it from the socket to prevent damage when the power supply is restored.
- Do not use the massage chair if the power cord is wet or damaged.
- Do not plug in or unplug the appliance with wet hands to avoid injury.
- Supervise children, people with disabilities, or people with reduced mobility when they are near the massage chair or using it.
- Use the product only for the purposes described in this manual.
- Do not use accessories not supplied by the manufacturer.
- To prevent injury, do not stand, sit or jump on the footrest.
- Do not attempt to sit on the armrest or backrest, as the chair could tip over and cause injury.
- Do not fall asleep during the massage.
- Clean the massage chair regularly and do not insert any objects into its slots.
- Do not move the massage chair by pulling on the power cable.
- Before each use, check the upholstery and backrest of the chair for any unusual cracks or damage. If you notice anything unusual, do not use the chair and contact the supplier's service centre immediately.
- This product is intended exclusively for domestic use.
- If you are unsure whether you can use the massage chair, consult your doctor.
- Consult your doctor before using this product if you have: malignant tumours, heart disease, are pregnant, in the postpartum period, or menstruating; if you require rest and relaxation; if you are undergoing treatment; or if you have spinal problems, cervical vertebrae abnormalities, or deformities.
- If you experience pain whilst using the product, stop using it immediately and seek medical attention in the event of injury.
- Do not massage inflamed or swollen skin.
- This product provides a pleasant massage for home use and is not a substitute for professional massage therapy.
- It is recommended that you use the massage chair for a maximum of 30 minutes a day, and that you do not spend more than 20 minutes on any one area, in order to avoid the adverse effects of overuse and overheating, which may shorten the product's lifespan.
- Do not use this product in environments containing aerosols or with an oxygen supply.

- Not suitable for children under 12 years of age.
- This product should not be used by persons with physical, sensory or mental impairments, or by persons without experience and knowledge, unless they are under the supervision or guidance of a person responsible for their safety when using this product.
- Children should be supervised to ensure that they do not play with this massage chair.
- If the power cable is damaged, it must be replaced with a special cable or parts obtained from the manufacturer or a service centre.
- Do not use this appliance with a voltage that does not meet the specified standards for this device.
- This product must be used with a grounded three-pin socket and should have a reliable earthing device.
- A damaged cover, whether leather or fabric, must be replaced immediately. Do not use the machine to avoid injury.
- To prevent malfunction, do not allow the remote control to get wet or be exposed to moisture

Product maintenance

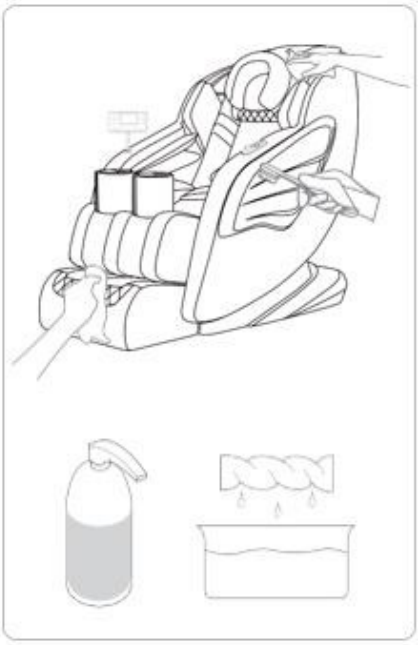


Cleaning

1. Do not use steel wool, abrasive cleaning agents or corrosive liquids (e.g. petrol or acetone) to clean the product.
2. Unplug the power cord from the socket.
3. Use a dry cloth to clean the massage chair, remote control and power cable.
4. Do not use damp cloths or cleaning agents.

Storage

1. Unplug the power cord from the socket.
2. Store this product in a cool, dry place away from direct sunlight.
3. Do not place heavy objects on this product.

If the cover is damaged or a mechanical fault has occurred, stop using the product and contact technical support.

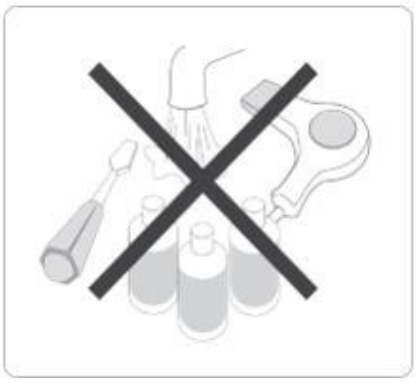

Leather care instructions for massage chairs

Proper care of the leather on your massage chair can significantly extend its lifespan, preserve its attractive appearance and ensure it remains pleasant to the touch. Here are some practical care tips:

1. Daily cleaning and maintenance Regular wiping

·Use a soft, dry cloth or a slightly damp cloth (soaked in water or a diluted neutral cleaning agent) to wipe the leather surface, removing dust, sweat stains and dirt.
·Avoid cleaning agents containing alcohol, alkaline or acidic ingredients (such as soapy water or bleach), as these can accelerate the ageing of the leather.
·Note: After wiping, dry immediately with a clean cloth to prevent moisture residue, which could lead to mould or flaking. Removing stubborn stains
·Oil-based stains (e.g. grease, cosmetics): Gently wipe with a small amount of alcohol (with a concentration of less than 75%), then clean with a damp cloth.
·Water-based stains (e.g. drinks, juices): Wipe up immediately with a damp cloth to prevent the liquid from soaking into the surface.
·Never use hard objects or coarse cloths for scrubbing, as you could damage the finish.

Regular care
·Every 1–2 months, apply a special PU leather care product (or silicone oil) evenly to the surface to maintain softness and shine and prevent cracking.
·Avoid using skin care oils (e.g. mink oil), as they may make the leather sticky or cause discolouration.

2. Precautions

Avoid direct sunlight and high temperatures
·Prolonged exposure to UV light can cause the leather to fade, harden and crack. Place the massage chair in a shaded area or use curtains to block out sunlight.
·Place the chair away from heat sources such as radiators or electric heaters, as high temperatures accelerate the ageing of the leather.
Humidity control
·A damp environment can cause mould or the leather to peel. Keep the room well-ventilated and dry; use a dehumidifier in high-humidity conditions.
·If the leather gets damp, dry it immediately with a dry cloth and allow it to air dry naturally. Never expose it to direct sunlight or use a hairdryer to dry it.
Minimise friction and contact with sharp objects
·When using the chair, avoid wearing clothing with hard objects such as studs or zips to prevent scratching the surface.
·If pets have access to the chair, remember to trim their claws or place a thin blanket under the chair to protect the surface.

3. Optimising usage habits Use the

massage chair evenly

·Prolonged pressure on a single spot may cause localised skin deformation. Adjust your sitting position regularly, or use a cushion to distribute the pressure.
·Avoid overloading the chair (exceeding the product's weight limit) to prevent premature wear and tear. Regular inspection and maintenance
·Check the seams, edges and other high-wear areas. If you notice any small cracks or peeling, use leather repair glue immediately to prevent further damage.
·If you are not using the chair for a long period, it is recommended that you cover it with a breathable protective cover to prevent dust from settling on it.

4. Solutions to common problems

·Minor scratches: Gently apply leather repair cream using a cotton bud and polish once dry.
·Sticky surface: This may be caused by an excessive amount of cleaning product. Wipe it off with a diluted neutral cleaning solution and allow to dry completely.
·Odours: Sprinkle baking soda over the surface, leave it for a few hours, then vacuum it up to absorb the odours.

5. Notes
·Do not use adhesive tape, double-sided tape or decorative adhesives, as removing them could damage the leather upholstery.
·If the leather is significantly worn or cracked over a large area, contact customer service to arrange for the leather upholstery to be replaced.

By following these steps, you can effectively extend the life of the leather and maintain the attractive appearance and comfort of your massage chair. The key to daily maintenance is early prevention of problems, quick resolution of minor issues, and preventing them from accumulating and causing greater damage

Product technical specifications

Model: VD-A077
Voltage: 100–
240V Power:
120W Weight:
55kg
Dimensions (folded position): 140 x 70 x 104 cm
Dimensions (folded position): 161 x 70 x 78 cm
Package dimensions: 117 x 75 x 106 cm

Our company reserves the right to improve the product and its instructions without prior notice. The appearance of the product may differ from the actual product.
These instructions have been carefully checked, but we cannot rule out the possibility of printing errors or misinterpretation of the content. We apologise for any inconvenience this may cause.