
Pro-Tech CHEF

Pro-Tech CHEF 800W Electric Hand Blender

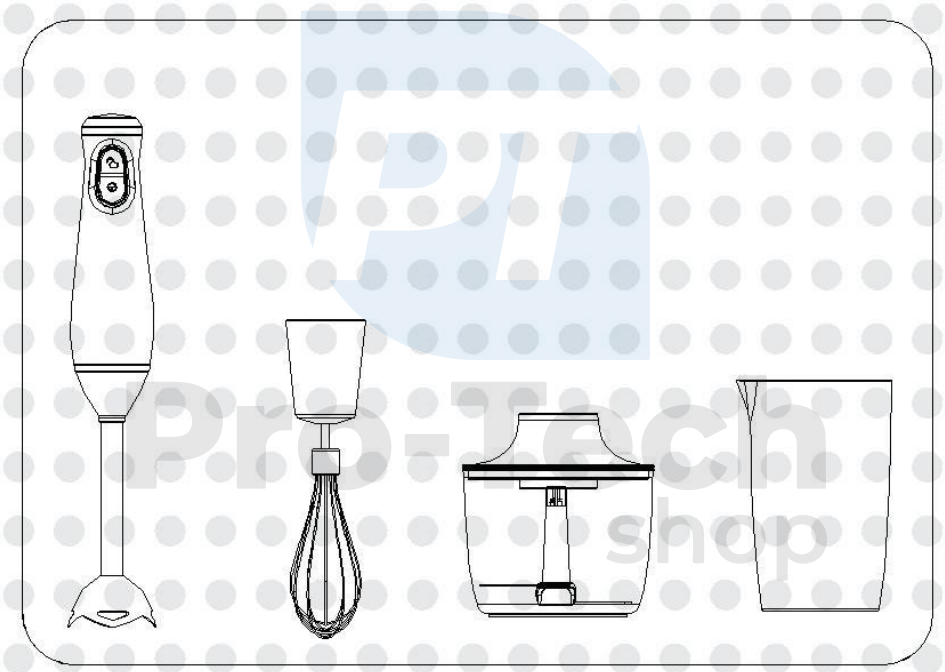

User manual

Translation of the original manual

General safety instructions

Please read the instructions carefully before using the appliance and keep them for future reference. If you give this appliance to someone else, please also pass on the user manual. This appliance is intended solely for domestic use. Any other use is considered improper and therefore dangerous. It is not suitable for commercial use. Do not use it outdoors and protect it from heat, direct sunlight, moisture (do not immerse it in any liquid) and sharp edges. Do not operate the appliance with wet hands. If the appliance is wet, unplug it from the socket. Unplug the appliance before cleaning it and always remove the plug from the socket after each use. This ensures that it is completely disconnected from the power supply.
Do not leave the appliance unattended. If you are leaving, always switch off the appliance or unplug it from the socket (pull the plug, not the cable). Check regularly for damage to electrical parts (such as the power cable). If you notice any damage, do not use the appliance and do not attempt to repair it yourself. Contact an authorised technician at any time. For safety reasons, the cable may only be replaced by
the manufacturer, our customer service department or a qualified electrician. Only original parts may be used on the appliance. When using the appliance, pay attention to the “special safety instructions” on the outside of the appliance.

Children and people with disabilities


For the safety of children, keep all packaging (plastic bags, boxes, foam packaging, cartons, etc.) out of their reach.

Warning. Do not allow children to play with plastic packaging, as there is a risk of suffocation! This appliance is not intended for use by children. To avoid danger, do not allow children to touch the appliance or its power button. This appliance may be used by persons with reduced physical or mental capacity, provided they are supervised and given appropriate instructions during use.

Special safety instructions

If the appliance is left unattended, or before dismantling or cleaning it, the power cord must be disconnected to ensure it is completely disconnected from the mains. Before replacing or handling accessories, switch off the machine and disconnect it from the mains to ensure that the machine is not running.
Warning: To prevent the risk of accidental restarting, do not connect the appliance to the power supply
via an external switch or cable. When operating the machine, check that the safety switch is functioning normally. Under no circumstances should you tamper with the safety features. During operation, no objects must be inserted into or come into contact with
to prevent injury to people or animals, or damage to property. Operate the machine on a smooth, level and stable work surface. Do not plug the machine’s power cable into an electrical socket without first installing all
necessary accessories.


Main parts and accessories

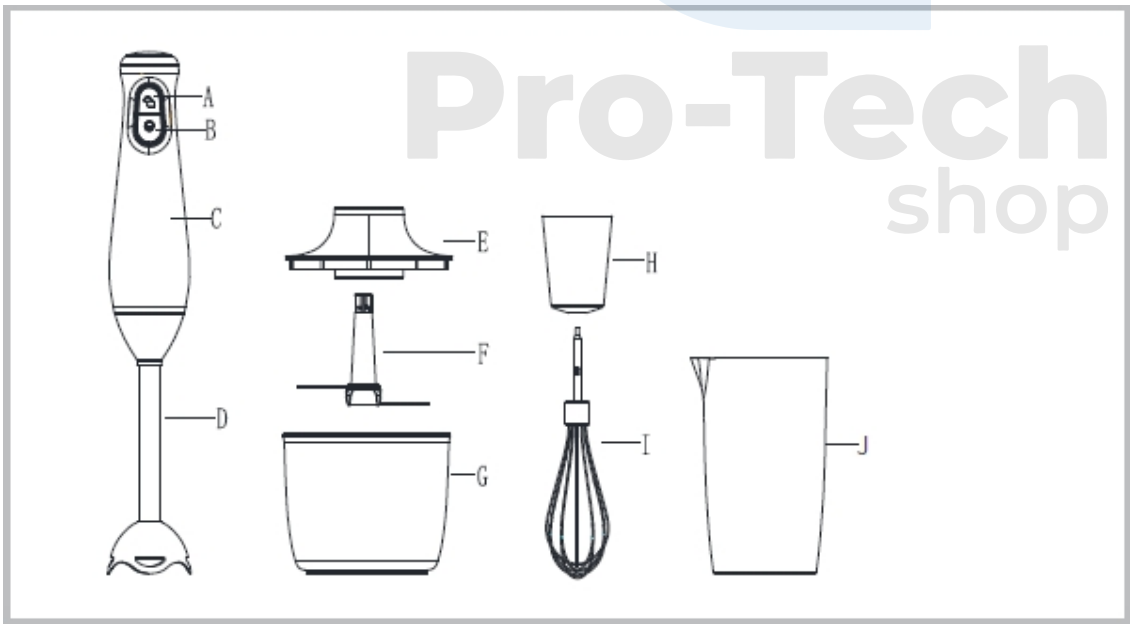

A. Turbo I speed switch
B. Turbo II speed switch
C. Motor unit
D. Blending rod
E. Container lid
F. Chopping blade
G. Chopping bowl
H. Whisk
I. Whisk
J. Measuring cup


Usage

Blending and mixing. This accessory is suitable for preparing and processing dips, sauces, soups, mayonnaise, mixed drinks, juices, smoothies, etc.

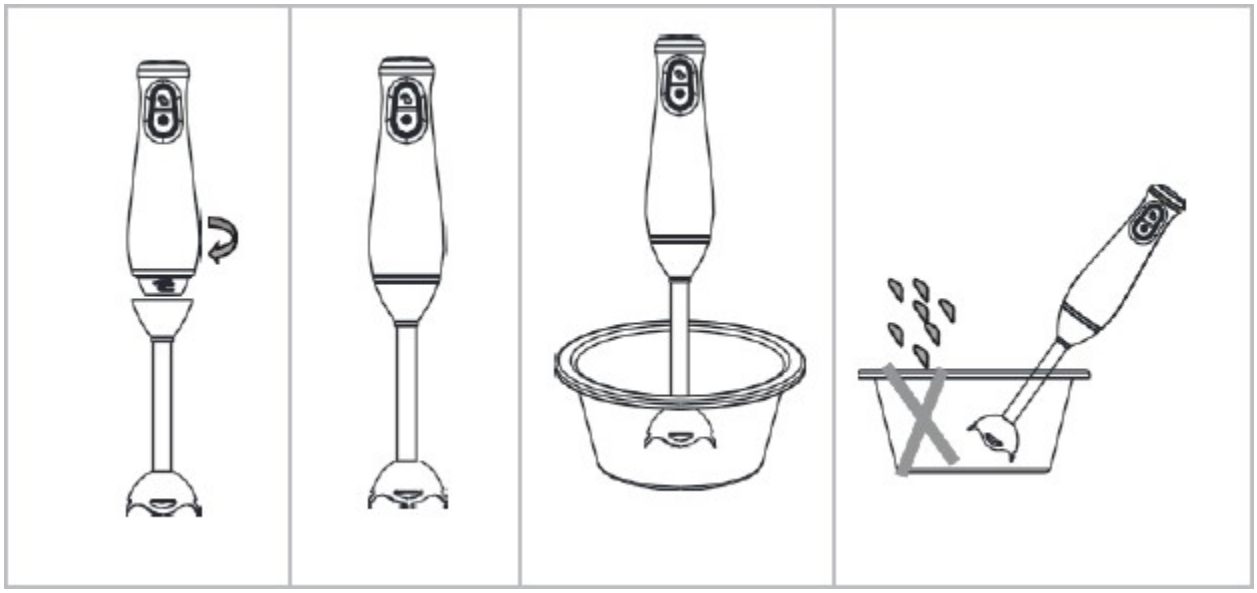

1. Slide the plastic or stainless steel immersion blender onto the motor unit until it clicks into place.
2. Place the immersion blender in the container, connect it to the power supply and set the speed to I or II.
3. After use, first disconnect the power supply and then remove the blending tool to separate it from the motor unit; you can choose the appropriate measuring jug or other containers.
Note: the chopping blade is very sharp, so please use it with care.

How to use the chopping bowl

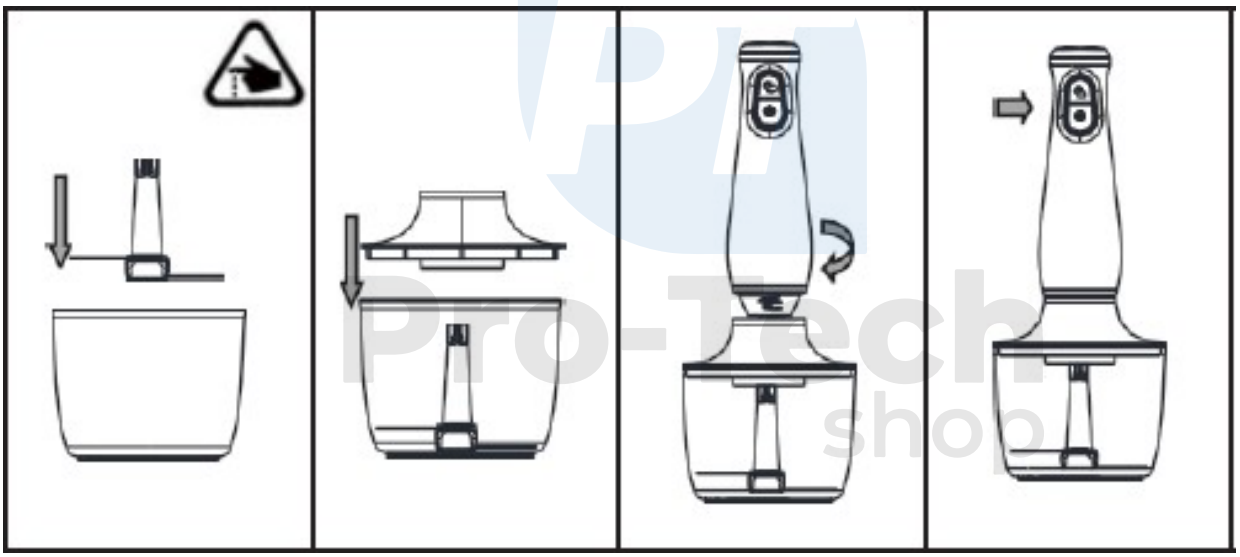


1. This product's chopping bowl is designed specifically for chopping soft foods such as meat, cheese, onions, vegetables, garlic, nuts and other ingredients.
2. Do not use this product to process excessively hard foods such as ice, nuts, coffee beans, cereals, etc.

Instructions before using the chopping bowl

1. Carefully move the plastic rod with the chopping blade and ensure you hold it only by the plastic rod (be careful of the sharp blades).
2. Place the chopping blade in the centre of the bowl, press it down to secure it, and place the non-slip base on the chopping bowl.
3. Place the food to be processed into the bowl.
4. Close the bowl with the lid
5. Attach the motor unit to the bowl until the lid locks into place.
6. Set the speed to II and hold the motor unit firmly during food processing to secure it between the unit and the plastic cover.
7. After use, disconnect the power supply and then remove the unit from the bowl lid.
8. Remove the bowl lid and carefully remove the chopping blade.
9. Remove the processed food from the bowl.

How to use the balloon whisk

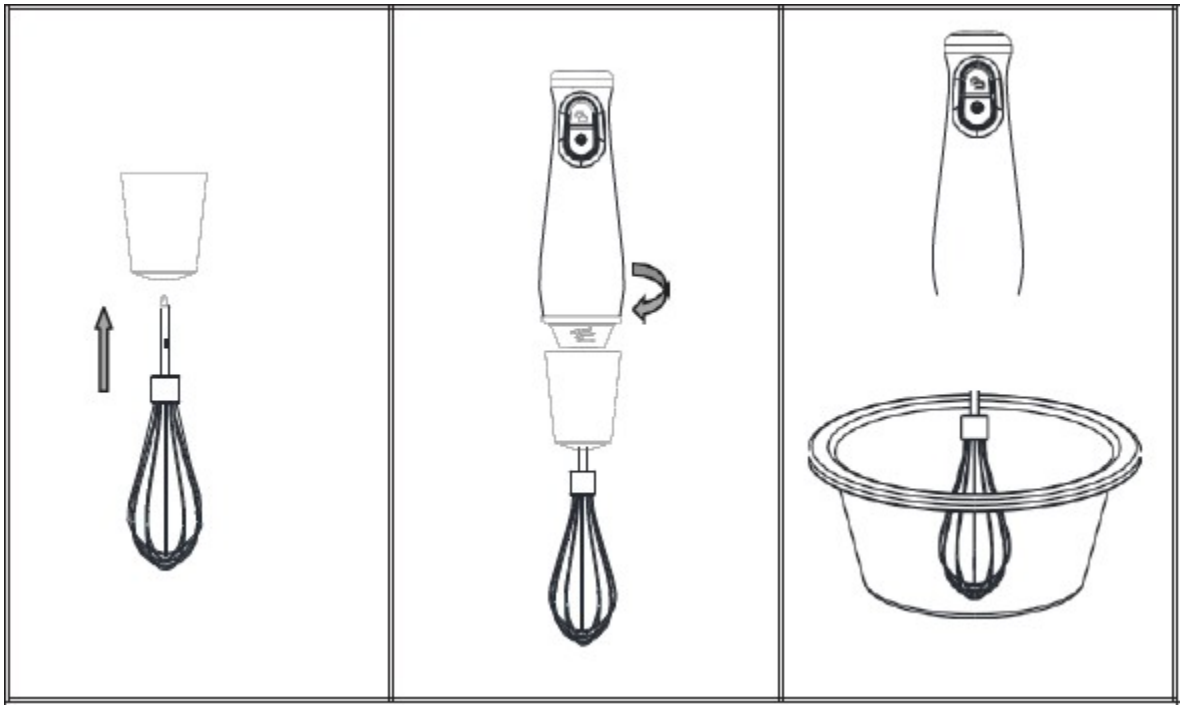

The balloon whisk is mainly used for making cream cheese, beating eggs, mixing instant drinks with water, etc.

1. Insert the shaft into the whisk and then turn it on the motor unit until it clicks into place.
2. Insert the assembled whisk shaft into the bowl, connect the power supply and press the speed switch I or II.
3. After use, unscrew the whisk from the appliance and remove the shaft at the same time.

Troubleshooting

Symptom	Causes	Solutions
The motor is running normally, but the blades are not turning.	The machine body and accessories are not fitted correctly.	Remove the accessory and refit it correctly.
The machine stops suddenly during use.	The engine has overheated after prolonged use.	Try again once the engine has cooled down
Abnormal vibrations or noise	1. Check that the body and accessories are securely fastened. 2. Check that there is not too much food in the bowl.	1. Tighten the body and accessories. 2. Switch off the machine and remove any excess food.
The appliance does not switch on when the power button is pressed after plugging in the power cable	1. Check whether there has been a power cut. 2. Check that the power cable is properly plugged in. 3. Check that the power socket is not switched off. 4. The built-in electronics are damaged.	1. Disconnect the power supply after checking. 2. Disconnect the power supply after checking. 3. After checking, disconnect the power supply 4. Send the unit to the service centre.

Notes: If the fault cannot be rectified after analysing the symptoms listed, contact the service department or company representatives. Non-specialists are strictly prohibited from dismantling the equipment.

Maintenance

Disconnect the power cable before cleaning.
Wipe the body of the device with a dry cloth. It is strictly forbidden to wash the body of the device with water or immerse it in water. As the blade is sharp, do not touch it.
Cleaning agents such as metal brushes, nylon brushes, decontamination powder and thinners will damage the surface finish of the product. Wipe any dirt from the power cable with a dry, soft cloth.

Cleaning

1. Use a damp cloth to clean the blender motor, bowl lid and whisk. Do not immerse them in water or rinse them directly under running water.

2. Other accessories can be washed in the dishwasher or directly under running water. Please note that the blade must be cleaned immediately after processing salty foods.
3. When cleaning, do not put too much detergent or descaler in the dishwasher.
4. If you are processing coloured foods, the plastic part of the appliance may become stained. Clean it with vegetable oil and place it in the dishwasher to wash.
Motor cover: Use only a damp cloth to clean the outside of the cover.

Technical specifications

Product code: PT41993
Model: HB-4603
Power supply: DC 220–240 V, 50–60 Hz
Power: 800W
Motor type: Copper DC motor Body material: ABS plastic
Blade and shaft material: Stainless steel Speeds: 2 speed settings
Maintenance: Removable blending rod

Pro-Tech shop