
Pro-Tech CHEF

Pro-Tech CHEF Multifunctional Food Processor

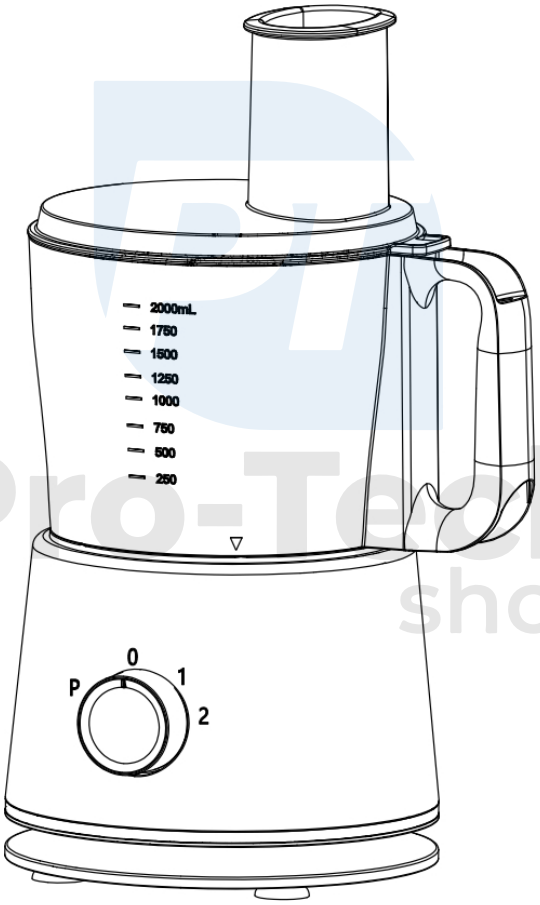

Pro-Tech shop

User Manual

Translation of the original manual

FOR DOMESTIC USE ONLY. Keep this manual for future reference and pass it on to future users along with the appliance

Safety Instructions


Please read all the following instructions before use to prevent injury or damage and to achieve the best results when using the appliance. Keep this manual in a safe place. If you give this appliance away or pass it on to someone else, do not forget to include this manual.

The warranty becomes void if damage is caused by failure to follow the instructions in this manual. The manufacturer/importer accepts no liability for damage caused by failure to follow the instructions in this manual, negligent use, or use contrary to the requirements of this manual.

1. Please read this manual before use and keep it for future reference.
2. The power supply used during operation must correspond to the rated voltage and frequency stated on the type plate.
3. Use only a suitable socket.
4. To protect the electrical components inside the product from danger, do not immerse the body of the product, the power cable, the plug, etc. in any liquid, and do not allow them to get wet. For further details, please refer to the section on cleaning.
5. This product is intended for domestic use and must not be used outdoors. The manufacturer accepts no liability for damage caused by failure to follow the instructions.
6. If the product is not working or is otherwise damaged, do not continue to use it. Send the product to an authorised service centre for repair.
7. For safety reasons, regularly check the power cable for any visible damage. If the power cable is damaged, it must be replaced by the manufacturer's qualified personnel, their service centre, or a similar facility to avoid any danger.
8. If the appliance falls into water, do not touch it. Unplug it from the socket, switch it off and send it to an authorised service centre for repair.
9. Never attempt to open the appliance's casing or repair it yourself, as this could result in an electric shock.
10. Children are unable to recognise the dangers associated with the incorrect use of electrical appliances, so they should never use domestic appliances without supervision.
11. Do not place food with a temperature above 60 ℃ into the juice container.
12. Do not use hot water at a temperature above 60 ℃ to wash or dry this product.
13. Do not press the safety pin or safety lever with any tool, rod, etc., as this may cause the appliance to start operating, which could result in injury.
14. Before each use, ensure that the power cable is not damaged.
15. Do not leave the appliance unattended whilst in use.
16. Do not allow the power cord to hang over the edge of a table or worktop, or to come into contact with hot surfaces. Do not pull on the power cord whilst the appliance is in operation, and do not disconnect the appliance from the socket by pulling on the cord. Once the appliance has stopped, allow it to cool completely before winding up the power cord. The appliance must not be stored or covered until it has cooled completely.
17. To prevent fire or electric shock, do not use accessories not supplied by the manufacturer.
18. When the appliance is not in use, or when replacing or installing accessories, disconnect it from the mains and remove the plug from the socket before loading food or cleaning.
19. The blades are very sharp, so please take care when using or cleaning the appliance.
20. Before starting the appliance, ensure that the lid is securely locked in place.
21. Do not insert your fingers or any other objects into the feed chute whilst the appliance is in operation. If food becomes stuck in the feed chute, use the food pusher to push it down.
22. Avoid contact with moving parts whilst the appliance is running.
23. Do not push food down with your hands whilst the machine is running; always use the pusher.
24. When processing food, keep your hands and kitchen utensils away from the moving blade or cutting disc to reduce the risk of serious injury or damage to kitchen utensils. You may use a scraper or spatula, but these must only be used when the appliance is not running.
25. To prevent the motor from overheating, do not use the machine for too long. It must not run continuously for more than 30 seconds without a load. After 5 consecutive operating cycles, you may only continue working once the appliance has cooled down. Cooling takes approximately 30 minutes.
26. Switch off the machine after each use and ensure that the motor has come to a complete stop before dismantling it.
27. Remove any attachments before cleaning.
28. People with physical, sensory or mental disabilities (including children), or those lacking experience and knowledge, should not use this product on their own unless a designated person is present to supervise their use of the product, instruct them on its use and take responsibility for their safety.
29. In households with children or people with disabilities, parents or family members must supervise them.


Pro-Tech shop

Description of parts

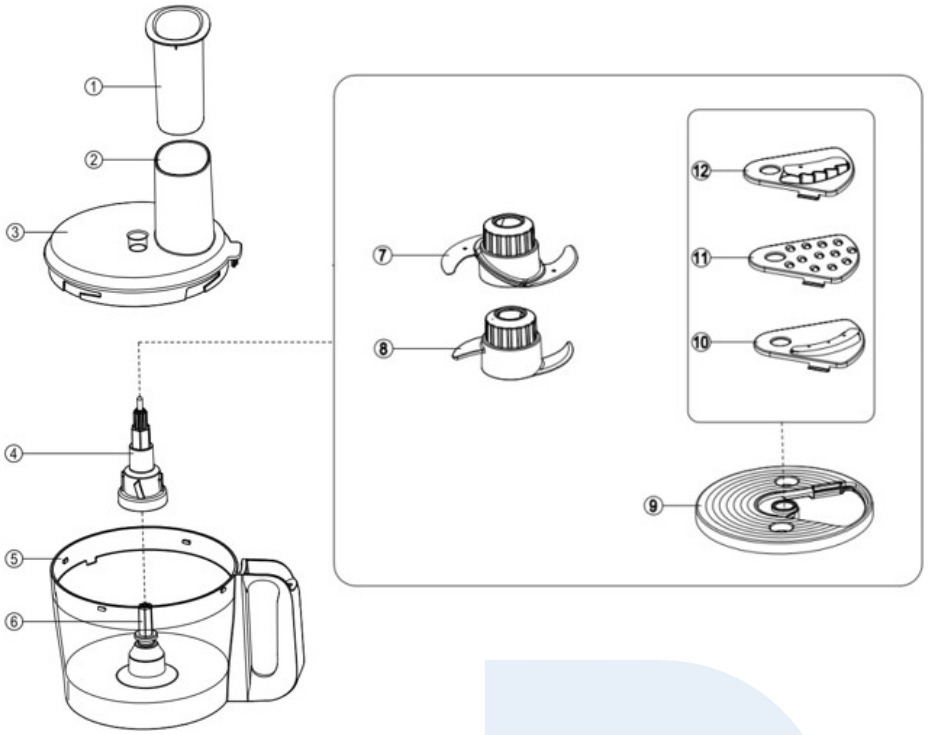

1. Slider
2. Filling tube
3. Processing container lid
4. Drive shaft
5. Processing bowl
6. Short shaft
7. Stainless steel chopping blade
8. Kneading blade
9. Knife holder
10. Cutting blade
11. Grating blade
12. French fry blade

Main body

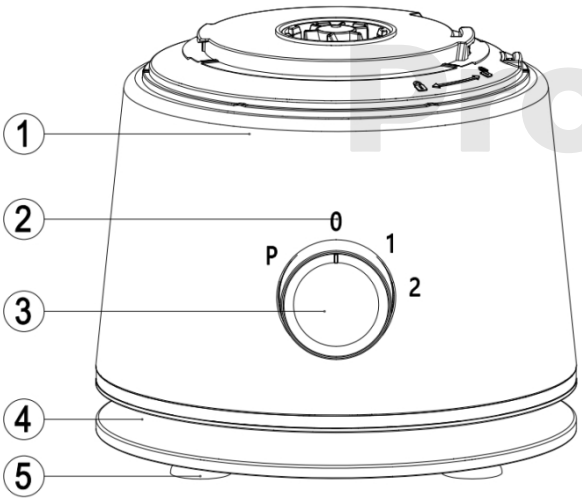

1. Body
2. Speed: P = Pulse 0 = Off


① = Low speed

②=High speed

3. Base
4. Non-slip feet

Food processor user guide

Slicing disc, grating disc, French fry disc

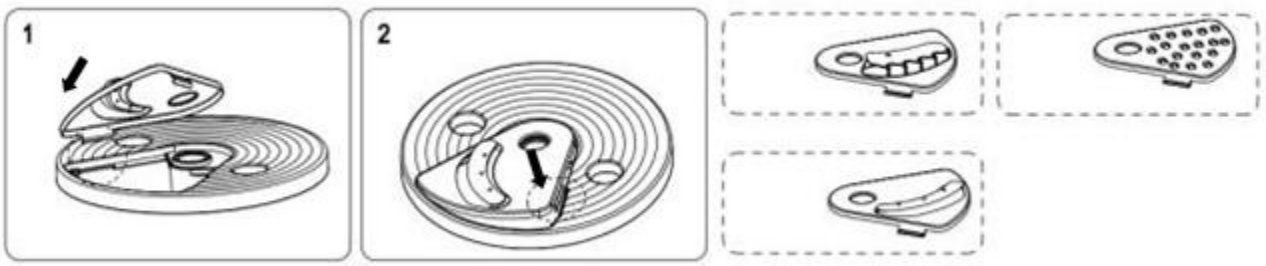

1. Fit the selected blade onto the blade holder, inserting it at a 30-degree angle and ensuring it is correctly seated.
2. Press the concave part of the blade down until it clicks into place.

NOTE:

• Take care of the sharp blades when inserting the blade into the holder.
• To remove the blade, turn the holder and press down on the blade to release it from the slot.


Disc holder + (crushing disc, slicing disc, chip-cutting disc)




Take the long rod and place it in a large bowl.



Place the knife holder with the stainless steel disc into the bowl.

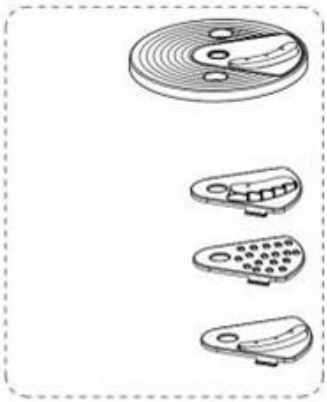

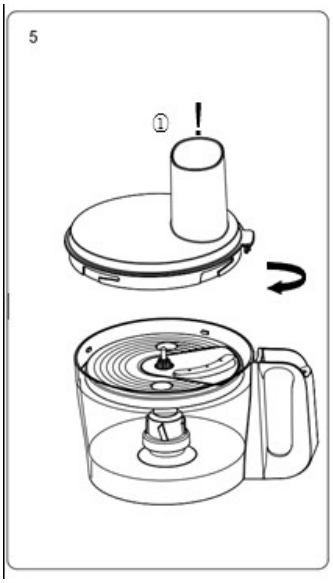

Place the lid on the jug and turn it clockwise until it clicks into place.



Place the bowl assembly onto the top cover and turn it clockwise until you hear a a 'click' and the safety switch is activated.




Place the food into the feed chute and push it down down with the pusher.

NOTE:

Once loaded, ensure that the shaft protrudes from the top of the knife holder. Do not push the food in by hand whilst the machine is running; always use the pusher.

Instructions for winding

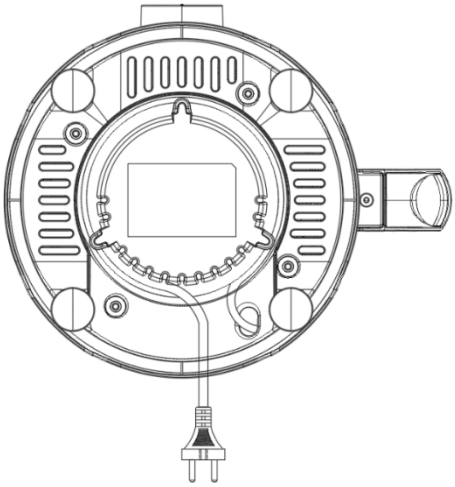

Wrap the power cable around the base and leave the plug next to the base.

Before first use

• Remove and dispose of all packaging materials.

Food processor instructions

Before first use, carefully unpack the food processor and its accessories and remove all packaging materials, labels or stickers. Clean the appliance as described in the 'Cleaning and Maintenance' section. The blades are sharp, so take extra care.
The appliance can be used for slicing meat, vegetables and fruit; kneading dough; blending, chopping, slicing and mincing vegetables or potatoes; and mixing smooth soups, sauces, cream, purées, milk, etc., using various accessories for different tasks.
Check that the power cable is not damaged.
Place the food into the mixing bowl. (Do not exceed the maximum capacity indicated on the bowl)

Food processor bowl

Function	Ingredients	Speeds	Max. capacity	Operating time (approx.)
Slicing	Cucumbers	3–5	600 g	20 s
	Carrots	3–5	600 g	20S
	Potato	3–5	600 g	20S
Chips	Potatoes	3–5	600 g	20S
Cutting	Meat	11	400 g	30S
Mixing	300 g flour + 170 g water	Low 1–3	470 g	150S

Safety precautions and cleaning

. Before cleaning, switch off the power and unplug the power cable.
. As an extra precaution when caring for children and vulnerable elderly people, the appliance must be disinfected with a disinfectant in accordance with the manufacturer's instructions when preparing food, and the hand blender must always be kept thoroughly disinfected.
. Some foods, such as eggs and carrots, may cause the plastic to discolour. In such cases, a cloth soaked in cooking oil may help to remove the discolouration.
. Do not touch the blades.
. Warning: The blades are extremely sharp, so take great care when cleaning!
. Note: Do not use a dishwasher to clean the main unit.
. Do not immerse in water or other liquids. Do not clean with thinners, petrol, metal brushes or scouring powder.

Warning

. All repairs and maintenance work must be carried out by authorised service centres.
. After 5 consecutive cycles of use, allow a break of at least 30 minutes before further use.

Technical specifications

Model: E02-01 Power
consumption: 1500 W
Voltage/frequency: 220–240 V ~ 50/60 Hz

Pro-Tech shop