
Pro-Tech CHEF

Pro-Tech CHEF Multifunctional Vegetable Slicer

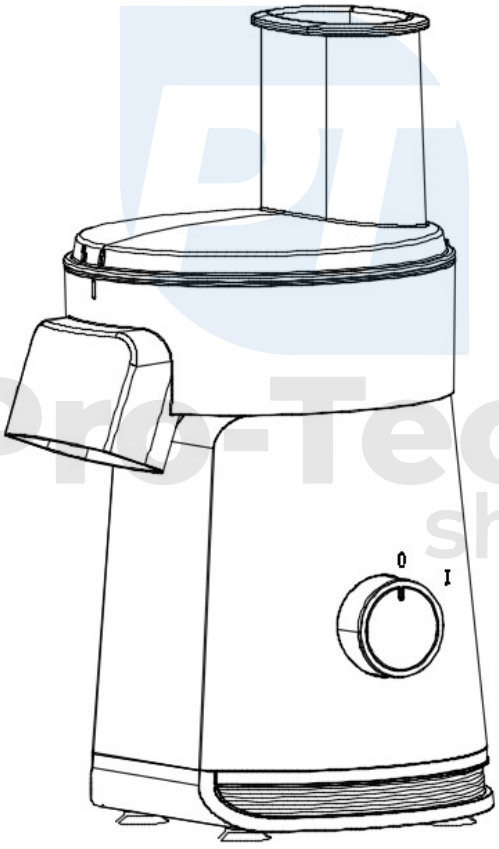

Pro-Tech shop

Instructions for use

Translation of the original instructions

FOR DOMESTIC USE ONLY. Keep this manual for future reference and pass it on to future users along with the appliance

Safety instructions

Read all the following instructions before use to prevent injury or damage and to achieve the best
results when using the appliance. Keep this manual in a safe place. If you give this appliance away or pass it on to someone else, do not forget to include this manual.


The warranty becomes void if damage is caused by failure to follow the instructions in this manual. The manufacturer/importer is not liable for damage caused by failure to follow the instructions in this manual, negligent use, or use contrary to the requirements of this manual.

1. Please read this manual before use and keep it for future reference.
2. The power supply used during operation must correspond to the rated voltage and frequency stated on the type plate.
3. Use only a suitable socket.
4. To protect the electrical components inside the product from danger, do not immerse the body of the product, the power cable, the plug, etc. in any liquid, and do not allow them to get wet. For details, please refer to the section on cleaning.
5. This product is intended for domestic use and must not be used outdoors. The manufacturer accepts no liability for damage caused by failure to follow the instructions.
6. If the product is not working or is otherwise damaged, please do not continue to use it. Please send the product to an authorised service centre for repair.
7. For safety reasons, regularly check the power cord for visible damage. If the power cord is damaged, it must be replaced by the manufacturer's qualified personnel, their service centre, or a similar facility to avoid any danger.
8. If the appliance falls into water, do not touch it. Unplug the appliance, switch it off and send it to an authorised service centre for repair.
9. Never attempt to open the appliance's casing or repair it yourself, as this could result in electric shock.
10. Children are unable to recognise the dangers associated with the incorrect use of electrical appliances, so children should never use household appliances without supervision.
11. Do not place food with a temperature above 60 ℃ into the juice container.
12. Do not use hot water at temperatures above 60 ℃ to wash or dry this product.
13. Do not press the safety pin or safety lever with any tool, rod, etc., as this may start the product, which could cause injury.
14. Before each use, ensure that the power cord is not damaged.
15. Do not leave the appliance unattended during use.
16. Do not allow the power cord to hang over the edge of a table or counter, or to come into contact with hot surfaces. Do not pull on the power cord during operation. After switching off the appliance, allow it to cool completely before winding up the power cord. Do not store or cover the appliance until it has cooled completely.
17. To prevent fire or electric shock, do not use accessories not supplied by the manufacturer.
18. When the appliance is not in use, when replacing or installing accessories, disconnect the appliance from the mains and remove the plug from the socket before loading food or cleaning.
19. The blades are very sharp, so please take care when using or cleaning the appliance.
20. Before starting the appliance, ensure that the lid is securely locked.
21. Do not insert your fingers or any other objects into the feed chute whilst the appliance is in operation. If food becomes stuck in the feed chute, use the food pusher to push it down.
22. Avoid contact with moving parts whilst the appliance is running.
23. Do not push food down with your hands whilst the machine is running; always use the pusher.
24. When processing food, keep your hands and kitchen utensils away from the moving blade or cutting disc to reduce the risk of serious injury or damage to kitchen utensils. You may use a scraper or spatula, but this may only be used when
the appliance is not running.
25. To prevent the motor from overheating, do not use the machine for too long at a time. Without a load, it must not run continuously for more than 30 seconds. After 5 consecutive operating cycles, you may only continue working once the appliance has cooled down. Cooling takes approximately 30 minutes.
26. Switch off the machine after each use and ensure that the motor has come to a complete stop before dismantling it.
27. Accessories must be removed before cleaning.
28. People with physical, sensory or mental disabilities (including children), or those lacking experience and knowledge, should not use this product on their own unless a designated person is available to supervise their use of the product, instruct them on its use and is responsible for their safety.
29. In households with children or people with disabilities, they must be supervised by parents or family members.
30. Children should be supervised and should not play with this appliance.
31. Children must not use the appliance without supervision.
32. Disconnect the appliance from the mains when it is not in use and before dismantling, assembling or cleaning.
33. Switch off the power switch and disconnect the power supply before changing accessories or touching moving parts.
34. Take care when removing the cutting blade for cleaning.

Pro-Tech shop

Description of parts


Vegetable slicer

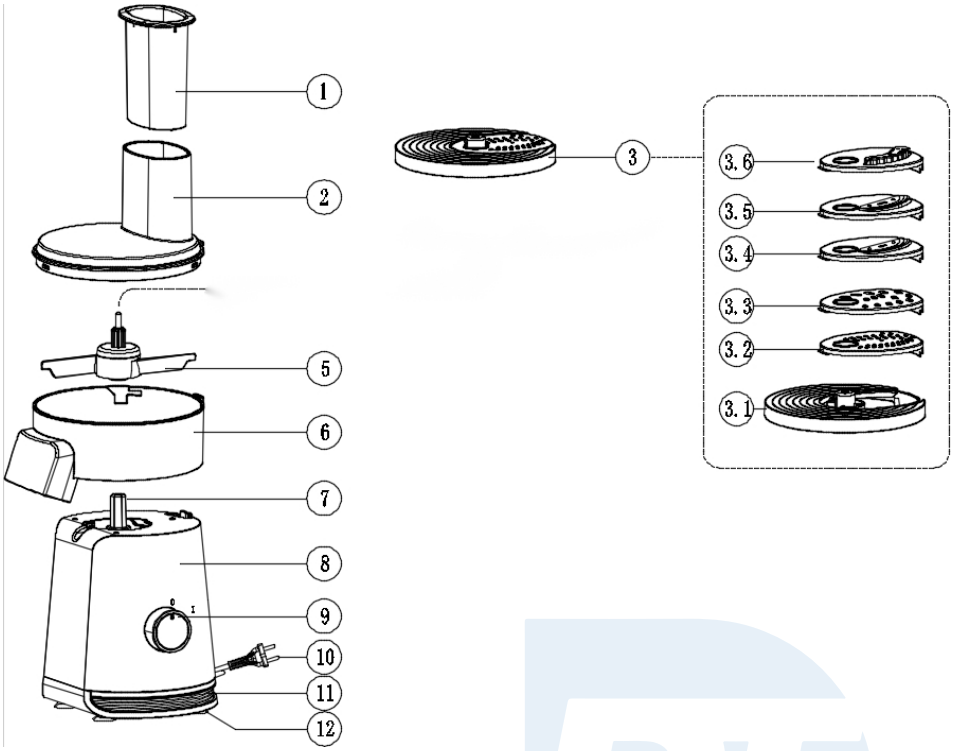


1. Feeder
2. Lid
3. Cutting disc set
3.1. Blade holder
3.2. Stainless steel grating disc (fine)
3.3. Stainless steel grating disc (coarse)
3.4. Stainless steel slicing disc (thin)
3.5 Stainless steel slicing disc (coarse)
3.6. Stainless steel French fry disc (fine)
5. Feeder blade
6. Processing bowl
7. Rotary shaft
8. Main body
9. Knob
10. Power cable
11. Base cover
12. Non-slip feet

Instructions for use of the vegetable slicer

Fitting the cutting discs: Depending on your needs, you can choose a fine grating disc, a coarse grating disc, a thin slicing disc, a coarse slicing disc and a fine French fry disc.

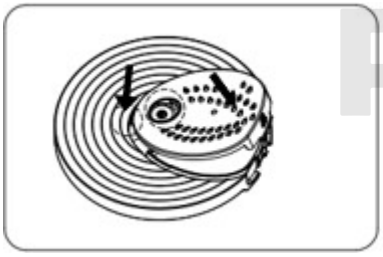

Fit the selected blade onto the blade holder, insert it at a 30-degree angle and ensure it is correctly seated.

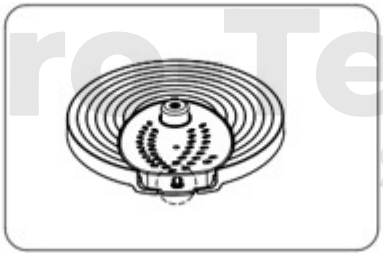

Press the concave part of the blade downwards until it clicks into place.




To remove the disc, turn the disc holder and press down on the indicated points with both thumbs, then gently apply force in the direction of the arrow.

NOTE:

- Be careful when inserting the blade into the holder; the blades are sharp
- When removing the blade from the blade holder, be careful of the sharp blades

Accessory assembly procedure

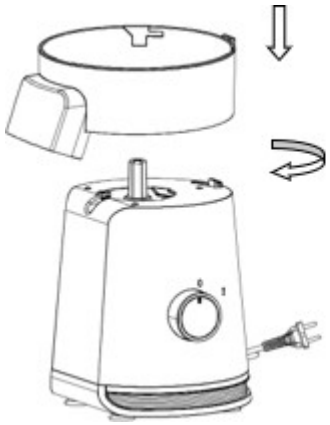

Place the food processor bowl onto the main body and turn it clockwise to secure it.



Fit the pusher blade onto the main body's rotating shaft, then fit the slicing disc assembly (or the stainless steel chip disc).



Place the lid on the food processor bowl and turn it clockwise until you hear a
a 'click'.



Place the food into the feed tube and push it down
the push button.

Pro-Tech shop

NOTE

- Once inserted, ensure that the shaft protrudes from the top of the knife holder.
- Do not push the food in by hand whilst the machine is running; always use the pusher.
- If the blade becomes jammed, switch off the appliance immediately and unplug it from the socket. Never attempt to clear the blockage with your fingers; use a rubber scraper or similar instead.
- During blending, food may spray out of the small holes in the blender lid. If this happens, wipe it up with a dry cloth.
- Do not use the appliance for longer than the specified operating time (2 minutes on, 2 minutes off).

Before first use

- Remove and discard all packaging materials.

Instructions for the food processor

Before first use, carefully unpack the food processor and its accessories and remove all packaging materials, labels or stickers. Clean the appliance according to the instructions in the 'Cleaning and maintenance' section.
The blades are sharp; take extreme care.

This appliance can be used for chopping, slicing, julienning and grating cheese, etc., with different accessories available for each task.
. Check that the power cord is not damaged.
. Place the food into the mixing bowl. (Do not exceed the maximum capacity indicated on the bowl)

Cleaning

1. Unplug it. Remove the components listed above.
2. Clean the above components with a soft cloth and cleaning agent.
3. Wipe the base with a soft cloth

Standard operating time for food processing

Function	Components	Speeds	Capacity	Operating time (approx.)
Slicing	Cucumbers	1	600 g	20 s
	Carrots	1	600 g	20s
	Potato	1	600 g	20S

Safety precautions and cleaning

• Before cleaning, switch off the appliance and unplug the power cord.
• To ensure extra care when looking after children and vulnerable elderly people, the appliance must be disinfected with a disinfectant in accordance with the manufacturer's instructions when preparing food, and the hand blender must always be kept thoroughly disinfected.
• Some foods, such as eggs and carrots, may cause the plastic to discolour. In such cases, a cloth soaked in cooking oil may help remove the stains.
• Do not touch the blades.
• Warning: The blades are extremely sharp, so take great care when cleaning!
• Note: Do not use a dishwasher to clean the main unit.
• Do not immerse in water or other liquids. Do not clean with thinners, petrol, metal brushes or scouring powder.

Warning

• All repairs and maintenance work must be carried out by authorised service centres.
• After 5 consecutive cycles, allow the appliance to cool down for at least 30 minutes before continuing.

Technical specifications

Product code: PT41997
Model: E51
Power supply: AC 220–240 V, 50–60 Hz
Power: 200W
Filling opening: extra-wide
Functions: Fine/coarse grating, fine/coarse slicing, julienne Control: 1 speed setting for easy operation
Safety: Safety switch and lock Stability: Non-slip rubber feet
Design: Plastic body with decorative pattern