

Pro-Tech CHEF

Pro-Tech CHEF Citrus Juicer

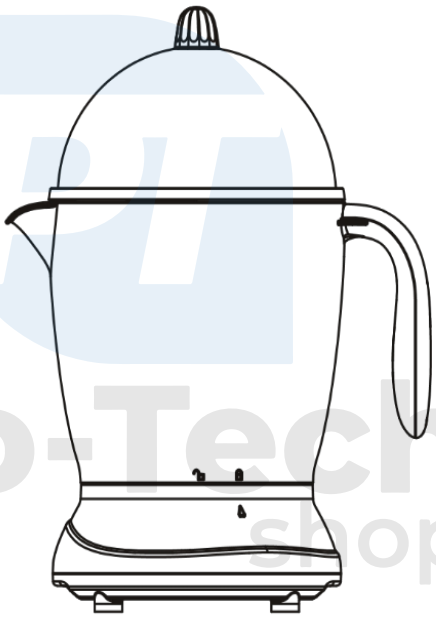

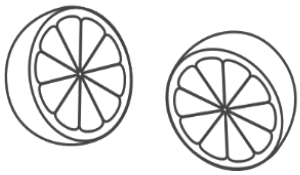

Instructions for use

Translation of the original instructions

★ **Please read these instructions carefully before use and keep them for future reference.**


★ **Supervise children to ensure they do not play with the appliance.**

★ **Do not allow minors to clean or maintain the appliance without supervision.**

Safety instructions

When using electrical appliances, always observe basic safety precautions, in particular the following:
1. Before use, place the appliance on a stable work surface and follow the operating instructions.
2. Before juicing, check that the juice container and base are correctly positioned, and that the arrow on the base points to the lock mark on the juice container.
3. Do not twist the power cord before use and do not unplug it from the socket whilst the appliance is in operation.
4. Unplug the appliance from the socket after juicing. Before cleaning, ensure that you have disconnected the appliance from the mains.
5. To prevent the motor from overheating and burning out, do not use the appliance continuously for too long. Using it in a 15-second on, 15-second off cycle will extend the appliance's lifespan.
6. Do not sterilise any accessories in a steriliser or steam cooker, as this will cause them to warp.
7. Do not leave this appliance unattended during operation and do not allow children to play with it.
8. Do not use this appliance if the cable is damaged. To avoid any risk, ask the manufacturer, their service department, or a qualified person to replace it.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instructions regarding the use of the appliance by a person responsible for their safety. Children should be supervised at all times to ensure they do not play with the appliance.
10. In the event of a fault, do not attempt to dismantle the appliance yourself; contact the after-sales service department instead.
11. This appliance is intended solely for domestic use; do not use it for any other purpose. Store the appliance in a dry and well-ventilated place, and protect it from dust and direct sunlight.
12. The manufacturer accepts no liability for incorrect use or use of this appliance contrary to the instructions.


Components

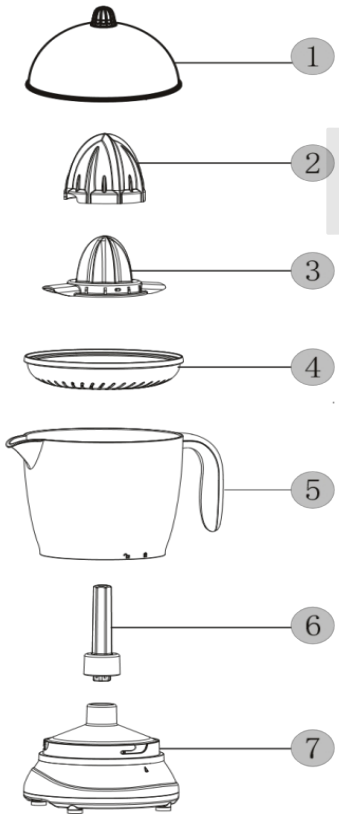



1. Transparent lid
2. Large juicer cone
3. Small juicer cone
4. Upper strainer
5. Juice container
6. Gear shaft
7. Base


Pro-Tech shop


Juicer settings

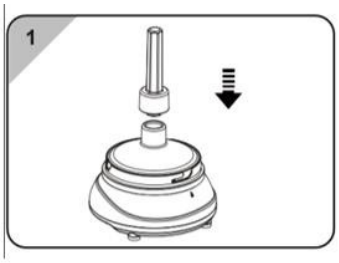


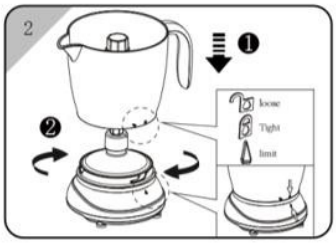

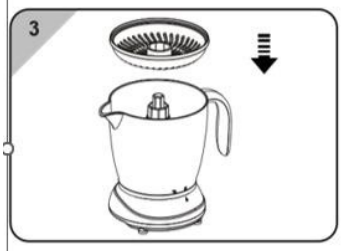

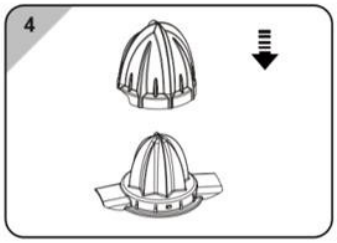

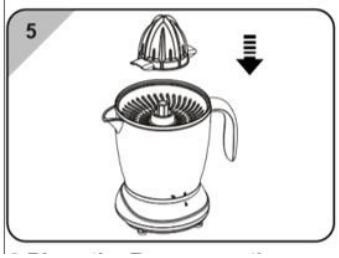

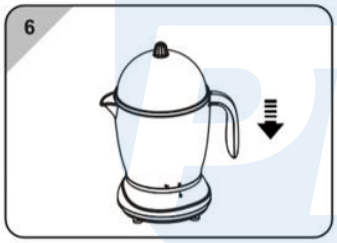

1. Insert the gear shaft into the base.

2. Place the juice cup in the direction indicated in step 1. Fit the indicator onto the base and align it with the position of the latch. Then press down.
Step 2. Turn clockwise. Tighten the jug body; the triangle indicates an arrow pointing towards the rotation indicator icon.

3. Place the upper strainer over the juice container.

4. Place the large juicer cone over the small juicer cone.

5. Place the juicer onto the splined shaft above the upper strainer.

6. Finally, place the transparent lid on top

Operation












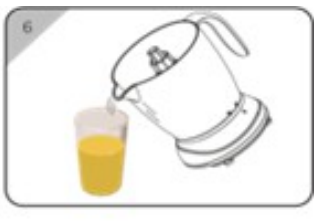

1. Plug the machine into the mains and remove the transparent lid. Before first use, wash all parts that come into contact with food.

2. Cut the citrus fruit in half and press the cut end of one half onto the juicer cone.

3. Press the fruit down; the juicer cone will start to rotate forwards. When you release the citrus fruit, it will stop. Then press down again; the cone will rotate backwards.

4. Remove the large juicer cone and use it to juice small citrus fruits, such as lemons.

5. Remove the juicer cone and then remove the top strainer.

6. Pour the juice into a cup, or drink it straight away

Pro-Tech shop

Cleaning

1. Unplug it. Remove the components mentioned above.
2. Unscrew the juice container anti-clockwise. Then remove the juice container.
3. Clean the above components with a soft cloth and cleaning agent.
4. Wipe the base with a soft cloth

Important notice

1. Pigment released from fresh fruit during juicing may cause discolouration of the plastic parts. This is a normal occurrence. You can continue to use the appliance without concern.
2. The product must be cleaned immediately after use. When cleaning all parts (except the base), use a soft cloth and cleaning agent, then wipe them down and dry them; do not use metal brushes or abrasive cleaning agents to avoid damaging the surface
3. Clean the base only with a damp soft cloth; never immerse it in water.
4. Before storing the device, ensure that all components are dry and place them in a dry, well-ventilated place.
5. When dismantling and cleaning the appliance, follow the instructions to avoid damaging it.
6. This product is suitable for juicing soft fruits such as oranges and lemons. Do not use it for any other purpose.

Technical specifications
Product code: PT42000
Model: D04
Power supply: AC 220–240 V, 50–60 Hz
Power: 30W
Container capacity: 600 ml with
measuring scale Functions: Automatic
two-way operation Noise level: less than
80 dB
Accessories: 2 sizes of juicing cones (for small and large fruits) Dimensions:
200 x 140 x 274 mm
Weight: 0.77 kg

Pro-Tech shop