
# Pro-Tech CHEF

## Pro-Tech CHEF 1200W Tabletop Blender

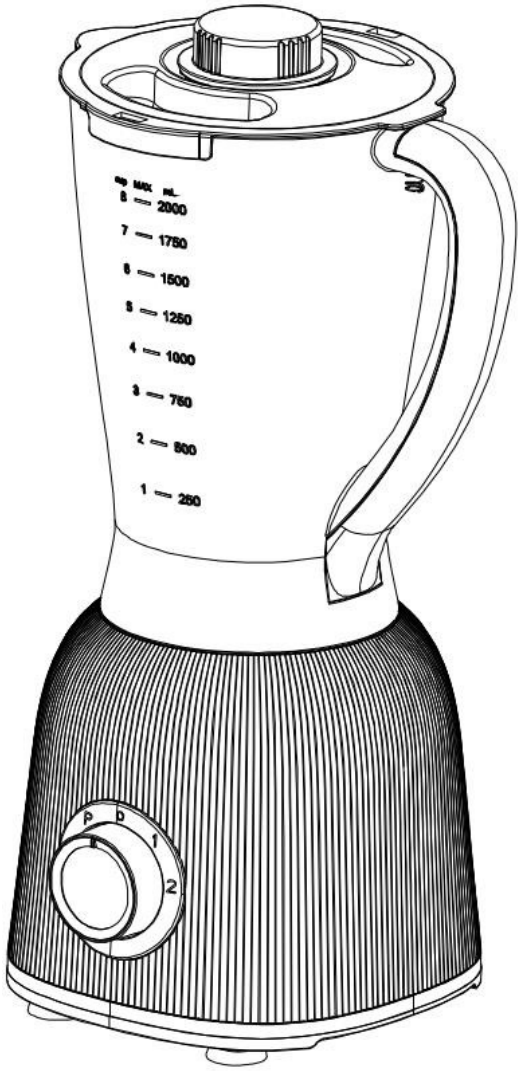


## User manual

**Translation of the original manual**

## General safety instructions


Before using the appliance, please read the user manual carefully and keep it for future reference.


- The appliance is intended solely for private use and for its intended purpose. This appliance is not suitable for commercial use. Do not use it outdoors (unless it is designed for outdoor use). Keep it away from heat sources, direct sunlight, moisture (never immerse it in any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is damp or wet, unplug it immediately.
- Do not leave the device unattended. If you leave the workplace, always switch off the device or unplug it from the socket (pull the plug, not the cable).
- Check the device and cable regularly for damage. Do not use the device if it is damaged.
- Use only original spare parts.
- Please pay attention to the following “Warning”.

## Warning

- This appliance may be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided they are supervised or have been given instructions regarding the safe use of the appliance and understand the associated risks.
- Children must not play with the appliance.
- Cleaning and maintenance must not be carried out by children without supervision.
- If the power cord is damaged, it must be replaced by the manufacturer, its service technician, or a similarly qualified person to avoid danger.
- Always disconnect the appliance from the mains when it is left unattended and before assembly, disassembly or cleaning.
- This appliance must not be used by children. Keep the appliance and its cable out of the reach of children.
- This appliance is intended for use in domestic households and similar environments, such as:
  - staff kitchens in shops, offices and other workplaces;
  - farmhouses;
  - guests in hotels, motels and other accommodation facilities;

## Overview of components

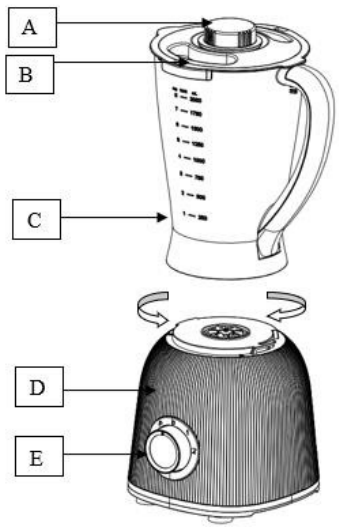

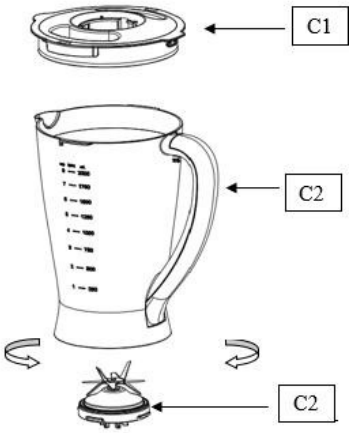
A Lid

B Lid

C Mixing bowl

D Motor unit

E Speed selector

## Instructions for use

- Place the blender jug (C) onto the motor unit (D),
- Place the ingredients into the mixing jug. You can add paste if required. Ensure that the mixture does not exceed the maximum level mark (MAX).
- Place the lid on the cover and press the cover (B) onto the mixing bowl (C).

- Plug the appliance into the socket and then turn the speed selector knob to position 1-2 or to the Pulse position. For soft fruits or vegetables, such as berries, kiwis, grapes and tomatoes, we recommend using speed 1, and for hard fruits and vegetables, such as apples and carrots, we recommend using speed 2 or the pulse mode.
- After blending, turn the speed selector knob to the “0” position.
- Wait until the motor has stopped, then remove the blender jug (C).
- No product should be processed for longer than 2 minutes.
- Unplug the power cord from the socket before cleaning.
- Never immerse the motor housing in water!
- Do not use any sharp or abrasive cleaning agents.
- To thoroughly clean small parts, pour in a little water or soapy water and switch on any speed for a few seconds; the glass jug will be properly cleaned.
- If necessary, you can remove the blade holder (C1) from the jug holder (C2) and clean it thoroughly. Remove and reinstall the blade holder; see the illustration.

## Motor housing

- Use only a damp cloth to clean the outside of the housing.

WARNING:

- The parts are not suitable for washing in a dishwasher. If exposed to heat or corrosive cleaning agents, they may become deformed or discoloured.
- Parts that have come into contact with food can be washed in soapy water.
- Allow the parts to dry thoroughly before reassembling the appliance.

## Technical specifications

Product code: PT42001
Model: B09
Power: 1200 W
Power supply: AC 220–240 V, 50/60 Hz
Bowl capacity: 2.0 l (with EK1 safety lock) Blades: 6
stainless steel blades for nutrient extraction Speeds: 2
speeds + Pulse function
Dimensions: 221 x 191 x 422 mm Weight
(N.W.): 1.86 kg