
Pro-Tech CHEF

Pro-Tech CHEF Portable Smoothie Blender

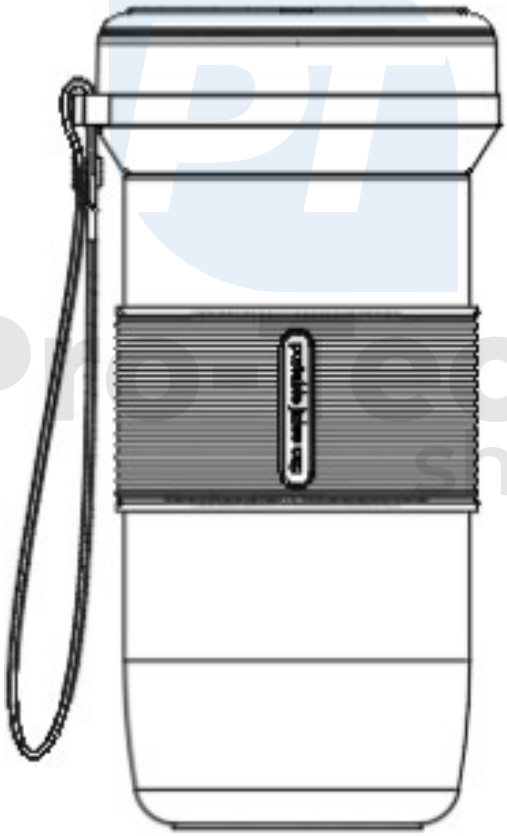


Instructions for use

Translation of the original instructions

SAFETY PRECAUTIONS:

1. Please read the user manual carefully before using this product.
2. Do not open the juicing container whilst the product is in operation, as this may interfere with normal functioning.
3. Do not touch the blades, motor or other moving parts whilst the appliance is in operation to avoid injury or damage.
4. Only open the juice container once the blades have come to a complete stop.
5. Do not attempt to dismantle or modify this product yourself.
6. Clean the product immediately after use. Rinse parts that come into contact with food with clean water. Be careful when emptying the container and cleaning parts, and watch out for sharp blades to avoid injury (you may wish to wear protective gloves).
7. After charging, unplug the appliance from the mains by holding the plug, not the cable.
8. Do not place or store the product near flammable gases, electric hobs, or in a hot oven.
9. Do not immerse the power adapter or motor in water or other liquids to avoid the risk of fire, electric shock or injury.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by a person responsible for their safety or have been given instructions on how to use the appliance.
11. Supervise children to ensure they do not play with the appliance.
12. Cleaning and maintenance should not be carried out by children without supervision.
13. The use of accessories not recommended or sold by the manufacturer may cause a fire, electric shock or injury.
14. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person to avoid danger.
15. Use this appliance only as described in the instructions; do not use it for any other purpose.
16. Before use, ensure that the main unit is securely fastened.
17. Do not attempt to disable the safety locking mechanism on the container lid.
18. Keep this manual for future reference

PRODUCT INTRODUCTION

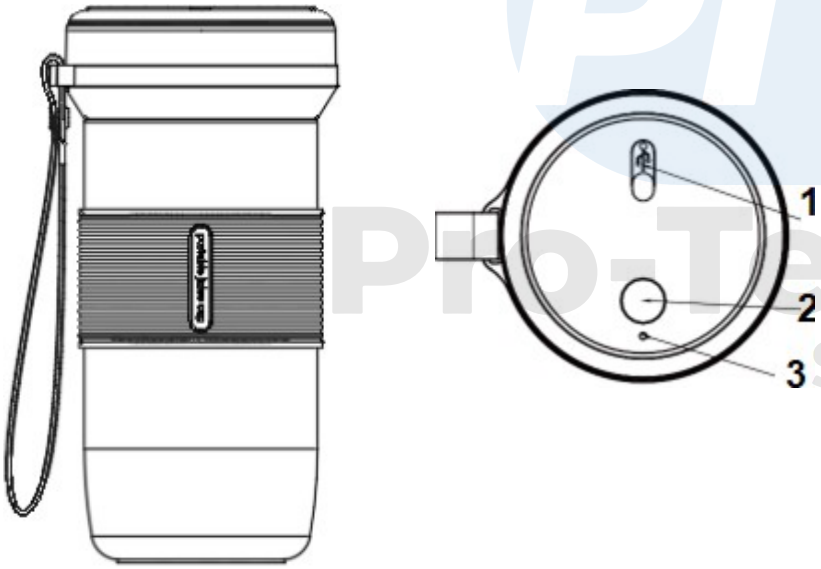

1. Charging
2. Button
3. Indicator light

CHARGING MODE：

a. When the adapter is connected, the LED indicator lights up red.
b. Once fully charged, the LED indicator lights up white.

OPERATING MODE:

The product has only one button with the following functions:

1. Press the button twice to switch the device on. The white indicator light will remain on and the device will operate at full power. If the battery voltage

drops below 5.2 V, the red indicator light will flash five times and the device will stop. If the indicator light flashes during operation, this means the battery is almost flat.


2. If food gets stuck in the blades during operation, the appliance will stop immediately and the white indicator light will start flashing. Whilst the light is flashing, pressing the button will have no effect, in order to protect the control board's software.
3. Press the button once during operation to stop the machine.

4. The red indicator light is on during charging. The white indicator light is on when charging is complete. When fully charged, the device lasts for 5 to 10 uses (with a cycle time of 40 seconds), and a break of at least 3 minutes must be observed between cycles. After 5 consecutive cycles, the device must be left to cool for 10 minutes.
5. Press and hold the button for 1.5 seconds to start the high-speed 180-second crushing cycle. After 2–3 seconds of operation, place the device with the button facing downwards until operation stops automatically.

BEFORE FIRST USE

Before using this product for the first time, clean the juicing bowl and the blade assembly on the main unit with soapy water and dry them thoroughly. Wipe the main unit with a damp cloth; do not immerse it in water.

Before first use, ensure the battery is fully charged and thoroughly clean all parts that come into contact with food. This product is equipped with a dual safety protection system. If the main unit is placed on its own, or if the juice container is not correctly installed and secured, pressing the button will not start the product. The indicator light will flash red. Only when the main unit and the juice container are securely installed can you start the appliance by pressing the button twice, which is indicated by a white light.

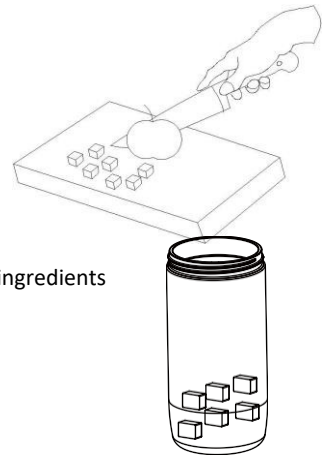


1. Friendly reminder: To meet transport requirements, the juicing container is factory-charged to only 40%. It is recommended to charge it to full capacity for 4 hours on first use to increase battery life.
2. Wash the fruit (e.g. apples, pears, etc.), peel it, remove the cores and cut it into small cubes measuring approximately 1 cm x 1 cm x 1 cm.

3. Place the chopped fruit into the juicing container and add water, milk or other liquids. The total amount of ingredients and liquids should not exceed the maximum mark (MAX) on the container, which is approximately 300 ml.


4. Attach the main unit to the juicing container by turning it into the correct position. Ensure that the main unit and the juicing container are securely fastened to prevent any leakage of ingredients and liquid.

5. Press the ‘button’ on the main unit of the appliance twice. Turn the appliance over and place it on the table, or hold it in your hand. The appliance will start operating with a preset single operation time of 40 seconds. During operation, gently shake the appliance from side to side to achieve a better mixing effect and a smoother taste.

Note:
1. During operation, press the “button” once to stop operation immediately.
2. If the blades get stuck when starting, you can place the product in an upright position and wait for it to start normally, then slowly turn it upside down again.

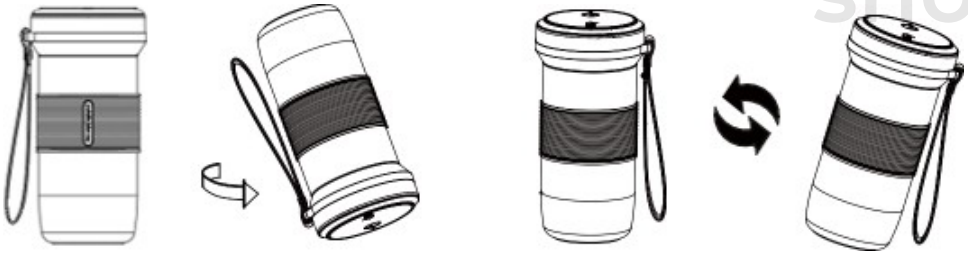

6. Once blending for juice is complete, unscrew the main unit from the juicing container and the juice in the juicing container is ready to drink straight away.

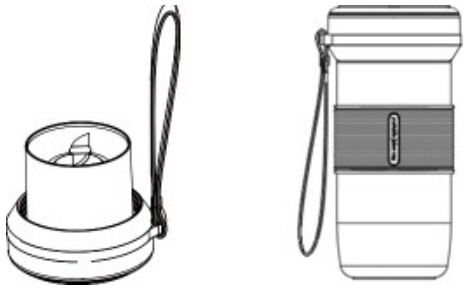

6. Insert the Type-C charging cable into a standard USB socket with a DC5V/1A specification, and attach the charging cable connector to the charging dock of the main motor to charge the product. The indicator light will glow red during charging and white when fully charged; the product cannot be started whilst charging.

HOW TO CLEAN THE HAND BLENDER

1. Before cleaning, ensure that the blade has stopped rotating
2. Do not use steel wool, abrasive cleaning agents or corrosive liquids (e.g. petrol, acetone) to clean this product
3. You can wipe the main unit with a damp, wrung-out cloth; do not rinse, soak or spray with water or other liquids to avoid damaging the appliance.
4. Rinse the inside of the juice container and any parts that come into contact with the juice with clean water, then wipe them dry immediately or leave them to air dry. Take care not to injure yourself. You may wish to wear protective gloves.
5. When storing, ensure the product is clean and dry, and place it in a dry, well-ventilated area away from direct sunlight.
6. Quick clean: Pour an appropriate amount of water into the juice container and attach it to the main unit. Double-click to start the machine and let it run for 5 to 10 seconds.

SAFETY PRECAUTIONS

Warning: Be aware of risks that may lead to danger, serious injury or significant damage to property.

1. Do not immerse the main unit in water.
2. Do not place overheated ingredients or liquids (≥60 °C) into the juicing container to prevent the container from bursting and the contents from splashing out, which could cause burns.
3. This product contains lithium-ion batteries. Unauthorised disassembly of the product's casing is prohibited to prevent possible damage to internal components or other hazards.
4. It is strictly forbidden to dismantle, crush, puncture or short-circuit the product, or to expose it to water or fire, particularly in environments where the temperature exceeds 60 °C.

CAUTION: Be aware of risks that may cause personal injury or damage to property.

1. Do not open the juicing container during operation to avoid disrupting normal operation.
2. This product is intended solely for domestic use. Do not use it for any other purpose.
3. Mixing time: Strictly adhere to the specified operating time. Each mixing phase is set to 40 seconds, with a minimum interval of 3 minutes between phases to allow the motor to cool down before resuming operation.
4. Do not use the product without ingredients or with an excessive amount of ingredients.
5. When blending ingredients that tend to foam, such as bananas, the appliance may become blocked
6. Clean the appliance immediately after use. Wash parts that come into contact with food with clean water. When cleaning the juicing bowl and its components, proceed with care and watch out for sharp blades to avoid injury (you may use protective gloves).
7. Do not place the product in an environment with high temperatures, strong magnetic fields, or flammable and explosive gases (e.g. natural gas, methane) to prevent component failure or accidents such as fire.
8. For cleaning or disinfection, do not place any part of this product in a dishwasher, microwave oven, steriliser or in hot water exceeding 60 °C. Avoid using other heating devices to prevent deformation or damage to parts.
9. This product contains a built-in lithium battery. Please note the following:
a. Store and use this product in an environment with a temperature between 0–40 °C.
b. If the product is not used for a long period, charge it every three months to prevent damage to the battery.
c. Charging speed may be slower in environments with temperatures below 10 °C; this is normal.
d. When the battery is low, charge it immediately.
10. When disposing of this product and its packaging, please recycle them through the appropriate organisations.

TECHNICAL SPECIFICATIONS
Product code: PT42003
Model: B31+G
Power: 60W
Battery: 1200 mAh rechargeable lithium, 7.4 V
Charging: USB Type-C
Container material: High-quality borosilicate glass, 400 ml (BPA-free) Blades:
SUS304 stainless steel, 2-arm blade
Safety: Automatic shut-off when disassembled, concealed blades, cut protection Water resistance:
IPX5 (can be rinsed)
Weight: 0.55 kg