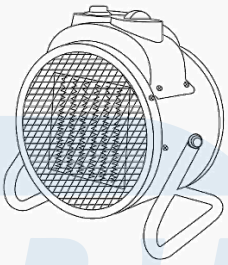
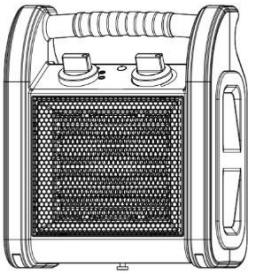
Electric heater

		
BH-20R1, BH-30R1	**BH-50R2**	**BH-20R3, BH-30R3, BH-20R**

Pro-Tech shop

User manual

Dear User,

Thank you for choosing our product. Before putting the device into operation, please read the important safety and usage information carefully. Any damage caused by incorrect use of the device or in breach of safety rules will void the warranty and the distributor's liability.

Safety and usage rules:

The electric heater is designed for heating enclosed living spaces where it is necessary to maintain the temperature at a certain level.

1. The appliance is intended for domestic use only. It should not be used in commercial or industrial premises. The appliance is not intended for outdoor use. Do not use in rooms where there is a risk of explosion or fire. The heater is not water-resistant. The appliance must not be used in the bathroom or in the immediate vicinity of baths, showers, water hoses, etc.

2. Before using the appliance for the first time, ensure that all protective packaging (plastic film, etc.) has been removed. For your own safety and that of your children, do not leave any objects (plastic bags, polystyrene, etc.) on the appliance. Before use
, check that the appliance is not damaged on the outside. Pay particular attention to the power cable. If any part is damaged, the appliance must not be used. If the power cable is damaged, it must be replaced by an authorised company or person. Incompetent repairs may make the device dangerous for the user.

3. Use the device only in an upright/vertical position.

4. To prevent overheating or fire, do not cover the appliance. Do not switch on the appliance if there are explosive or flammable vapours in the vicinity. Do not place the heater near an open flame or near cooking or heating appliances. Do not expose the appliance to direct sunlight, hot surfaces, moisture, sharp edges, or similar hazards.

5. Do not use the appliance near curtains, drapes or other fabrics (the material may catch fire).

6. The heater should be placed on a stable, hard, preferably heat-resistant surface at a safe distance from furniture or other appliances.

7. The appliance may only be operated with the power cable and plug already fitted. The plug must be plugged into a suitable socket in accordance with the information on the rating plate. Do not use an extension lead.

8. Do not touch the appliance or the plug with wet or damp hands. This may cause a life-threatening electric shock.

9. Ensure that the mains voltage matches that of the appliance.

10. The socket to which the appliance's power cable is connected must always be accessible so that the appliance can be disconnected from the mains at any time.

11. The device must not be left connected to the mains without supervision due to the risk of fire.

12. Always disconnect the appliance from the mains when it is not in use. To disconnect the appliance from the mains, pull the plug out of the socket. Never pull on the cable.

13. If the heater is to be moved to another location, switch off the appliance and then remove the plug from the socket. Allow the appliance to cool down before moving it. Do not move the appliance by pulling on the power cable. Use the handle when carrying the appliance.

14. The surface of the heater is hot. - The appliance will remain warm for a while after being switched off – it cools down gradually.
When the heater is in operation, do not touch the hot air outlet elements – there is a risk of burns.

15. Do not stand directly in front of the hot air outlet whilst the heater is in operation
- there is a risk of burns.

16. Do not dismantle the appliance whilst it is live – there is a risk of death.

17. Do not touch the appliance with wet hands – risk of death. Only touch the heater with dry hands.

18. Do not insert any foreign objects into the openings of the appliance. Risk of injury, electric shock or damage to the appliance.

19. When the heater is in operation, it is forbidden to smoke cigarettes, approach with burning or smouldering objects, or use any equipment (tools, accessories, etc.) that may cause a spark – risk of death.

20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or by persons without experience or knowledge of the appliance, unless they are supervised or have been instructed in the use of the device by persons responsible for their safety. The device is intended for use by adults only and should be kept out of the reach of children.


Pro-Tech shop

Technical specifications:

Model	**BH-20R1**	**BH-30R1**	**BH-20R3**	**BH-30R3**	**BH-50R2**	**BH-20R**
Supply voltage	230V	230V	230V	230V	400V	220–240V
Frequency	50Hz	50Hz	50Hz	50Hz	50 Hz	50Hz
Electric heater operating mode:	25/1000W /2000W	30/1500/3000 W	25/1000W/2000 W	30/1500/3000 W	50/2500/5000 W	30/1500/3000 W

Instructions for use:

The appliance is controlled by rotary knobs on the top of the heater.

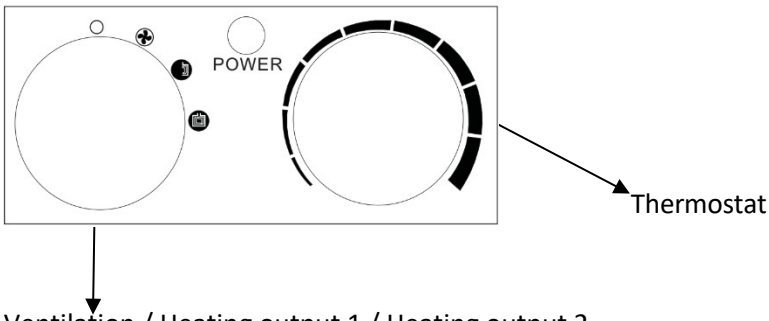

Operating mode:

Use the rotary selector to set the operating mode: ventilation / heating output 1 / heating output 2

Thermostat:

You can set the desired room temperature using the temperature rotary

selector. To do this:

1. Set the mode switch to one of the 'heating' positions.
2. Turn the temperature control clockwise until it clicks into place.
3. Once the room has reached the desired temperature, turn the temperature control anti-clockwise until it clicks.
4. The thermostat will control the heater to maintain a constant room temperature.
5. When you have finished working, switch the mode selector to the "ventilation" position to allow the unit to cool down.

Cleaning:

1. We recommend cleaning the heater of dust and other dirt once a month. This will ensure the unit operates efficiently.
2. Always unplug the device and allow it to cool down completely before carrying out any maintenance
3. Use a vacuum cleaner to remove dust.
4. Clean the exterior of the device with a damp cloth and then dry it with a dry cloth. Never immerse the device in water. Do not use any aggressive cleaning agents or solvents, as these may damage the heater's surface.

Storage:

1. Before storing the appliance, unplug it from the mains, allow it to cool down and clean it.

2. If the appliance is not going to be used for a long time, place it in its original cardboard box together with the user manual and store it in a dry, well-ventilated place.

3. Do not place any heavy objects on the box during storage, as this could damage the appliance.

Warranty:

1. The warranty for this device is provided in accordance with applicable laws. A valid proof of purchase is required to claim the warranty.

2. The warranty does not cover damage caused by natural wear and tear of components, damage during transport, or use contrary to the intended purpose as set out in the user manual, including failure to comply with the device's installation requirements.

3. A claim will only be considered if the equipment is returned in its original condition and in its original packaging.

4. It is prohibited to make technical modifications to the equipment.



The symbol on the product or its packaging indicates that this product must not be treated as household waste. Take it to the appropriate collection point for recyclable materials for end-of-life electrical and electronic equipment. The correct disposal of end-of-life products has an impact on the environment and health. Further information on the recyclability of this product can be obtained from your local council, the local environmental health department, or the shop where you purchased the product.