
Pro-Tech CHEF

Pro-Tech CHEF 3-in-1 2200W Kitchen Food Processor

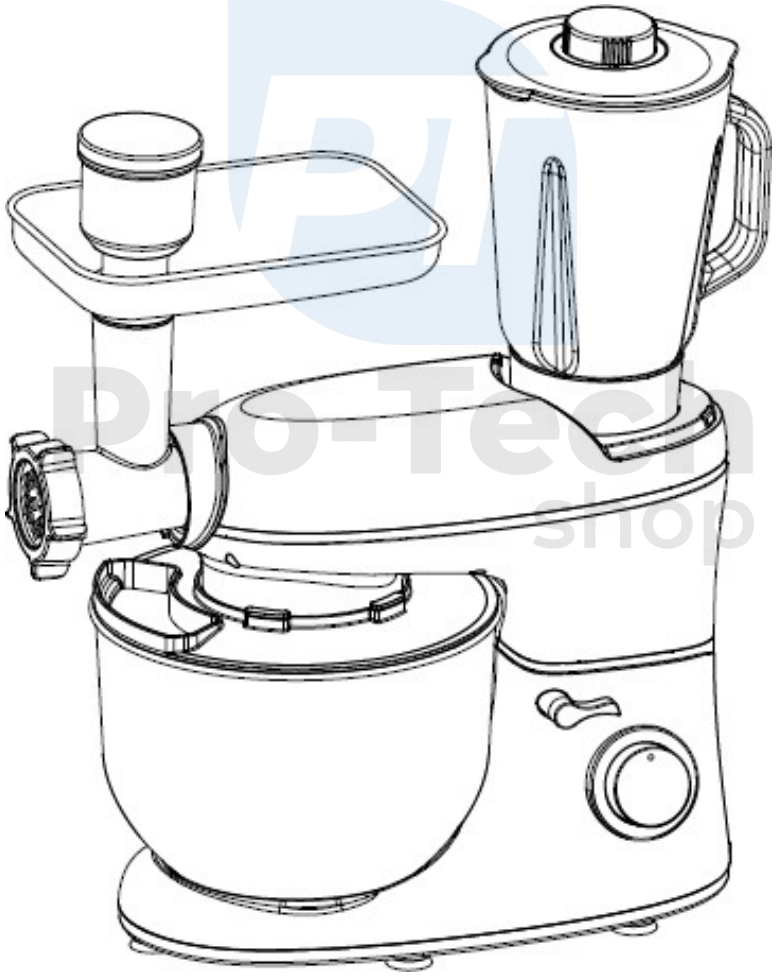

User manual

Translation of the original manual

Please read the following instructions for the correct use of the product before use. Please keep these instructions and follow the recommendations, as failure to do so may endanger life or health.

Important:
- Please read this carefully before use and follow all instructions in the manual.
- Do not use the product if any part is missing or damaged.
- Keep this manual for future reference.

Features:

The 3-in-1 food processor (food processor, blender, meat mincer) is a useful appliance in any kitchen. One appliance, three uses. The first is a blender – the food processor has a separate 1.5-litre glass jug; the second is a meat mincer with three different sieve sizes; and the third is a planetary mixer. The machine has a 6.2-litre bowl fitted with a sturdy handle. It is made of stainless steel and has a splash guard, allowing you to keep it clean even when blending at the highest speeds. The set includes 3 attachments for food preparation. The beater with silicone ridges is used to perfectly combine dough ingredients. The dough hook is designed for thorough kneading of dough, such as yeast dough, and the whisk is used for whipping light ingredients, such as cream or egg whites. The appliance features 6 speed settings and also has a PULSE function.

Assembling the meat mincer:

All you need to do is remove the cover on the front of the food processor and screw on the mincer, place the meat bowl on top, and the mincer is ready for use.

Assembling the mixer:

Installation is incredibly simple. Unscrew the cover on the upper rear of the body and screw on the jug. Once the blender is fitted, it is ready for use.

Use:

1. Plug the appliance into a socket.
2. To raise the arm, turn the safety knob clockwise. The arm will rise automatically.
3. Place the bowl into the body and turn it according to the indicator shown on the appliance (until it clicks into place).
4. Fit the protective cover over the drive shaft
5. Fit the required attachment (hook/whisk/beater) by inserting the top part into the output shaft and turning it anti-clockwise until it clicks into place.
6. Add the ingredients (max. 1.5 kg).
7. Lower the arm using the safety knob.
8. Start the machine by turning the knob to the desired speed.
9. For pulse operation, set the switch to the PULSE position. The switch must be held in this position for the desired duration of the interval. When released, the switch automatically returns to the 0 position.
10. When finished, switch off the food processor, remove the bowl, unplug it from the mains and clean it.

Cleaning:

- Unplug the power cable from the socket before cleaning.
- Never immerse the motor housing in water!
- Do not use sharp or abrasive cleaning agents.
- Use only a damp cloth to clean the outer surface of the cover.
- The components are not dishwasher-safe. They may warp or discolour when exposed to heat or aggressive cleaning agents.
- Items that have been in contact with food can be cleaned with soapy water.
- Allow the parts to dry thoroughly before reassembling the appliance.

Warning:
- Check that the voltage indicated on the appliance matches the voltage of the mains socket to which you intend to connect it.
- Do not use the appliance if the plug, power cable or other parts are damaged.
- Do not contact unauthorised persons for the replacement or repair of a damaged power cable. Contact the importer.
- Keep the appliance out of the reach of children.
- Keep the power cable away from hot surfaces.
- Always ensure that the plug is properly inserted into the socket.
- Do not connect the device to an external timer.
- Do not place the appliance on or near flammable materials.

Pro-Tech shop

- Do not place the appliance close to a wall or on top of another appliance. Leave at least 10 cm of free space at the back and sides and 10 cm of free space above the appliance.
- Do not place anything on top of the device.
- Do not use the appliance for purposes other than those described in this manual.
- Do not leave the appliance running unattended.
- When the appliance is in operation, do not block the air vents and protect the appliance from dirt.
- The device is intended for private use and for its intended purpose only. This device is not suitable for commercial use.
- Keep it away from heat sources, direct sunlight, moisture (never immerse it in any liquid) and sharp edges. Do not use the appliance with wet hands.
- If the device is damp or wet, unplug it immediately.

Special safety instructions:
- Always disconnect the appliance from the mains when leaving it unattended and before assembly, disassembly or cleaning.
- Switch off the appliance and disconnect it from the mains before changing accessories.
- Do not use the appliance for purposes other than those for which it is intended.
- Do not insert anything into the rotating parts of the appliance whilst it is in operation.
- Place the machine on a smooth, flat and stable work surface.
- Do not plug the device's mains plug into a mains socket without first installing all necessary accessories.

CAUTION:
Ensure the blender is switched off before removing it from the stand. Take care when handling sharp blades, emptying the bowl and during cleaning.

Technical specifications:
Product code: PT74491
Model: SM-1504BM
Colour: black
Bowl capacity: 6.2 l
Speed settings: 6 speeds + PULSE
Drive: METAL GEAR SYSTEM: planetary, metal
Control: mechanical knob with red LED backlight Locking function to prevent accidental opening
Power: 2200 W
Frequency: 50-60 Hz Body material: ABS plastic Power supply: 220-240V
Power cable length: 100 cm Device dimensions: 33x37x24 cm
Packaging dimensions: 60x38x28.5 cm Device weight: 5.20 kg Weight with packaging: 10.6 kg

Pro-Tech shop