
Pro-Tech CHEF

Pro-Tech CHEF 2200W Kitchen Stand Mixer

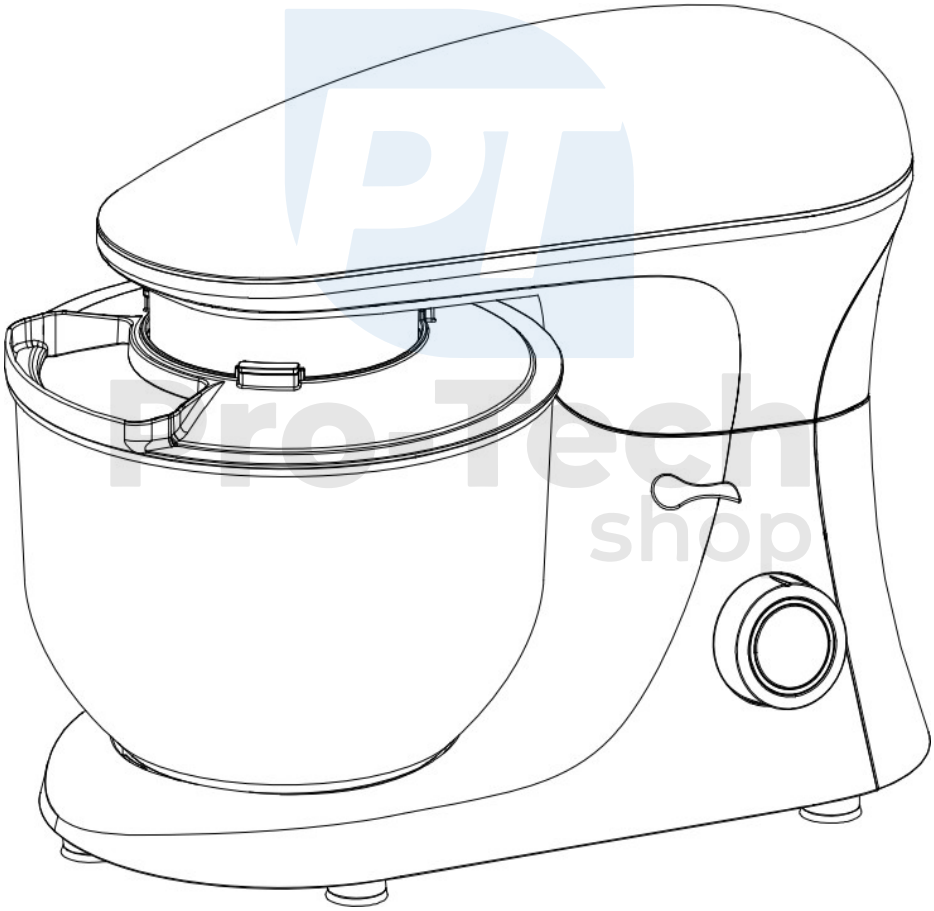

User manual

Translation of the original manual

Please read the following instructions for the correct use of the product before use. Please keep these instructions and follow the recommendations, as failure to do so may endanger life or health.

Important:
- Please read this carefully before use and follow all instructions in the manual.
- Do not use the product if any part is missing or damaged.
- Keep this manual for future reference.

Technical specifications:
Colour: black Bowl
capacity: 6.2 l
Number of speed settings: 6 + PULSE function
Drive: METAL GEAR SYSTEM: planetary, metal
Control: rotary knob with red LED backlighting Safety feature to
prevent accidental opening
Power: 2200W
Frequency: 50–60 Hz Body
material: ABS plastic Power
supply: 220–240 V
Power cable length: 100cm Device
dimensions: 43x33x24.5cm
Packaging dimensions:
35.5x45x27cm Device weight:
5.40kg Weight with packaging:
7.20kg

Features:

The machine has a 6.2-litre bowl fitted with a sturdy handle to make your work easier and help you remove the contents. It is made of stainless steel and has a splash guard, allowing you to keep it clean even when blending at the highest speeds. The food processor has non-slip suction cups, ensuring it does not slide off the worktop during use and does not bump into other kitchen utensils whilst in operation. The appliance is equipped with 6 speed settings, each tailored to the needs of the recipe being prepared at the time, e.g. whipping, mixing, chopping, kneading dough and more. It also features a PULSE function.

Use:

1. Plug the appliance into a socket.
2. To raise the arm, turn the safety knob clockwise. The arm will rise automatically.
3. Place the bowl into the body and turn it according to the indicator shown on the food processor (until it clicks into place).
4. Fit the required attachment (hook/whisk/beater) by inserting the top part into the output shaft and turning it anti-clockwise until it clicks into place.
5. Add the ingredients (max. 1.5 kg).
6. Start the arm using the safety button.
7. Fit the splash guard and start the machine by turning the knob to the desired speed.
8. For pulse operation, set the switch to the PULSE position. The switch must be held in this position for the desired duration of the interval. When released, the switch automatically returns to the 0 position.
9. When you have finished, switch off the robot, remove the bowl, unplug it from the mains and clean it.

Cleaning:

- Unplug the power cable from the socket before cleaning.
- Never immerse the motor housing in water!
- Do not use sharp or abrasive cleaning agents.
- Use only a damp cloth to clean the outer surface of the cover.
- The components are not dishwasher-safe. They may warp or discolour when exposed to heat or aggressive cleaning agents.
- Items that have been in contact with food can be cleaned with soapy water.
- Allow the parts to dry thoroughly before reassembling the appliance.

Warning:
- Check that the voltage indicated on the appliance matches the voltage of the mains socket to which you intend to connect it.
- Do not use the appliance if the plug, power cord or other parts are damaged.

Pro-Tech shop

- Do not contact unauthorised persons to replace or repair a damaged power cable. Please contact the importer.
- Keep the appliance out of the reach of children.
- Keep the power cable away from hot surfaces.
- Always ensure that the plug is properly inserted into the socket.
- Do not connect the device to an external timer.
- Do not place the appliance on or near flammable materials.
- Do not place the appliance close to a wall or on top of another appliance. Leave at least 10 cm of free space at the back and sides and 10 cm of free space above the appliance.
- Do not place anything on top of the device.
- Do not use the appliance for purposes other than those described in this manual.
- Do not leave the appliance running unattended.
- When the appliance is in use, do not block the air vents and protect the appliance from dirt.
- The device is intended for private use and for its intended purpose only. This device is not suitable for commercial use.
- Keep it away from heat sources, direct sunlight, moisture (never immerse it in any liquid) and sharp edges. Do not use the appliance with wet hands.
- If the device is damp or wet, unplug it immediately.

Special safety instructions:
- Always disconnect the appliance from the mains when leaving it unattended and before assembly, disassembly or cleaning.
- Switch off the appliance and disconnect it from the mains before changing accessories.
- Do not use the appliance for purposes other than those for which it is intended.
- Do not insert anything into the rotating parts of the appliance whilst it is in operation.
- Place the machine on a smooth, flat and stable work surface.
- Do not plug the device’s mains plug into a mains socket without first installing all necessary accessories.

CAUTION:

Ensure the blender is switched off before removing it from the stand. Take care when handling sharp blades, emptying the bowl and during cleaning.

Pro-Tech shop